

REPAIR PARTS MANUAL MODEL NO. MC2042YT (96042011500) Lawn Tractor



www.mcculloch.biz

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:


- Product "TRACTOR"
- MODEL NUMBER "MC2042YT (96042011500)"
- Part Number
- · Part Description

TABLE OF CONTENTS


SCHEMATIC	3
ELECTRICAL	4-5
CHASSIS	6-7
DRIVE	8-9
ENGINE	10-11
STEERING	12-13
MOWER DECK	14-15
MOWER LIFT	16
SEAT	17
DECALS	18
WARRANTY	20

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 **SCHEMATIC**

SCH11

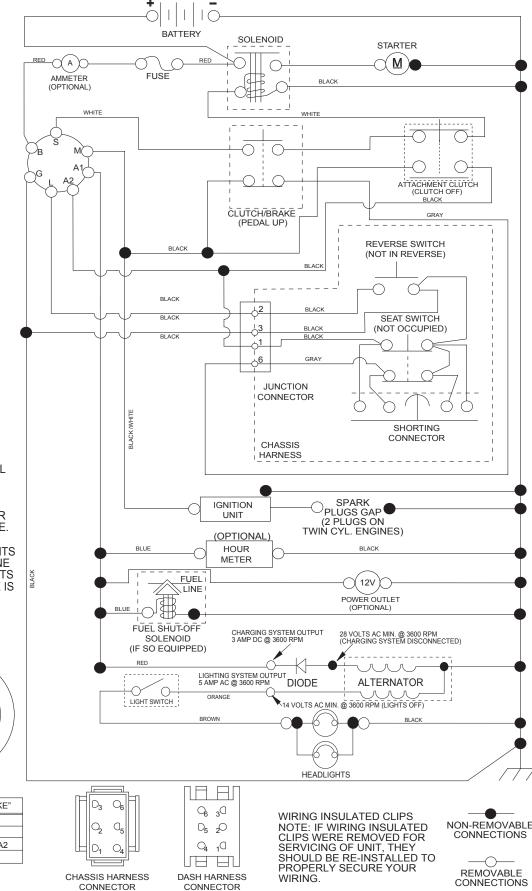

NOTE YOUR TRACTOR IS **EQUIPPED WITH A SPECIAL** ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

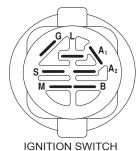


POSITION CIRCUIT OFF M+G+A1 RUN/OVERRIDE B+A1 RUN B+A1 L+A2 START B + S + A1

(MATING SIDE)

(MATING SIDE)

NON-REMOVABLE

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 ELECTRICAL

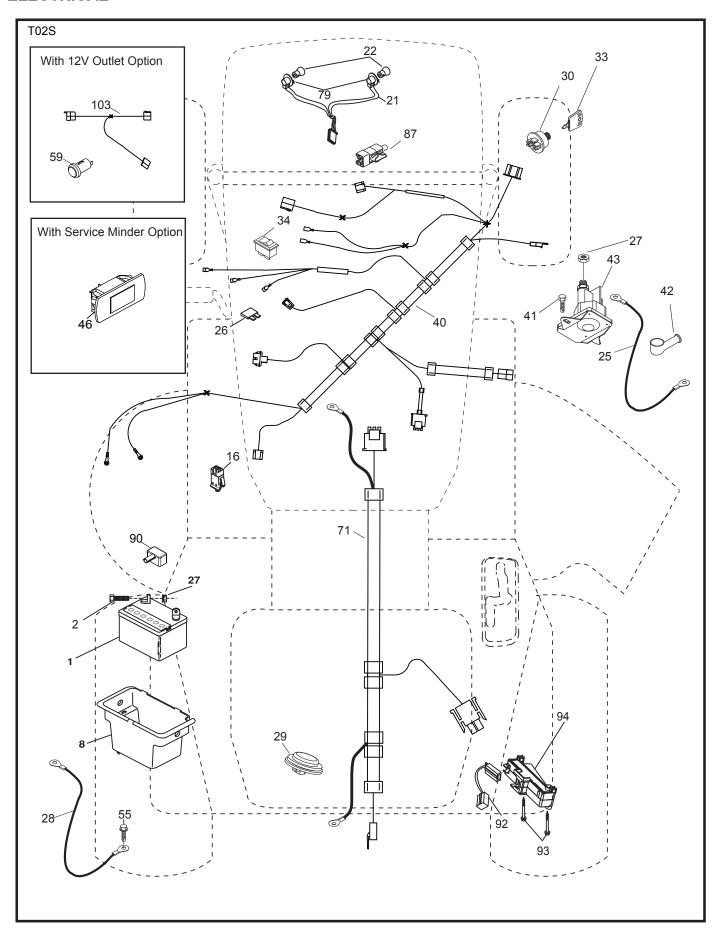


TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Head 1/4-20 x 3/4
8	532 19 32-28	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21	532 18 37-59	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25		Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 19 88-85	Cable, Ground
29	532 40 15-45	Switch, Seat
30		Switch, Ignition
33	532 41 19-33	Key/Chain
34	532 11 07-12	Switch Light/Reset
40		Harness Ignition Dash
41		Screw Thd Cut 1/4-20 x 1/2
42		Cover, Terminal
43	532 19 25-07	Solenoid
46		Gauge SRVCMNDR HRMTR
55		Screw Thdrol 5/16-18 x 3/4 TYTT
71	532 40 04-49	Harness Ignition
79	532 17 52-42	Socket Asm Bulb Twistlock
87		Switch Interlock Clutch Cable
90		Cover Terminal Battery
92		Harness Pigtail Console ROS
93	532 19 25-40	Screw Plastite 10-14 x 2.0
94	532 19 18-34	Module Reverse ROS

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 CHASSIS

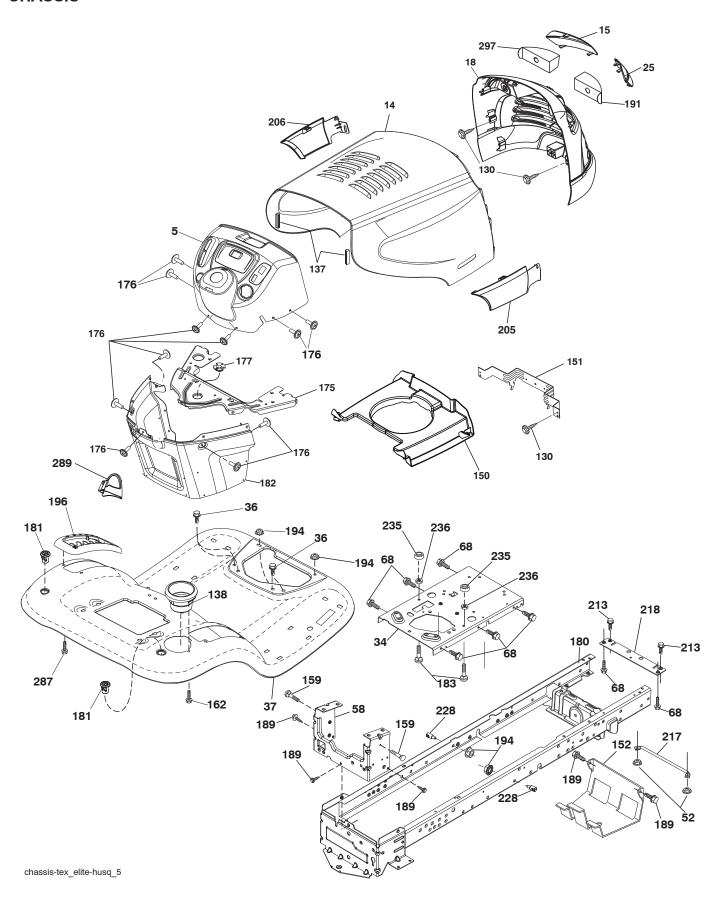


TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 CHASSIS

KEY	PART	
NO.	NO.	DESCRIPTION
5	532 43 27-79	Dash Upper
14	532 43 27-74	Hood
15	532 18 99-82	Lens Elite-Husq Clear LH
18 25	532 43 27-78	Grille
25 34	532 18 99-81 532 19 61-25	Lens Elite-Husq Clear RH Plate Engine Welded Chassis
36	817 06 05-12	Screw 5/16-18 x 3/4 Smgml Tap/R
37	532 42 09-86	Fender
52	873 68 05-00	Nut, Hex, Crownlock 5/16-18
58	532 41 22-80	Drawbar Upper 2pc Sml Fender
68	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 tytt
130	532 41 63-58	Screw
137	532 18 49-21	Bumper Hood Large 1 75"
138	532 40 97-30	Cupholder TL Tex 428
150	532 43 16-32	Air Duct
151	532 40 78-07	Bracket Pivot Lasr/Elte/Husq LT
152 159	532 19 95-35 817 00 06-12	Shield browning w/tex
162	532 14 24-32	Screw Hexwsh Thdr 3/8-16 x 3/4 Screw Hex Wsh Hi-Lo 1/4 x 1/2 unc
175	532 19 32-43	Crossmember LT
176	532 40 07-76	Screw #10-24x5/8 Rnd Qudrx Gim
177	532 19 52-27	Bushing Steering YT/GT
180	532 41 50-63	Chass Wldmt TL 12 Ga/2pc 18/22"
181	532 40 47-96	Bushing Mnt Fend Crgo Blk Tex
182	532 19 30-57	Dash Lower LT ccs
183	874 78 05-20	Bolt Fin Hex 5/16-18 unc x 1-1/4
189	817 00 05-12	Screw 5/16-18 x 3/4 Smgml Tap/Bl
191 194	532 41 65-00 873 90 05-00	Insert reflective RH
194	532 41 45-79	Nut, Lock Hex Flange 5/16-18 unc Console Asm Decklft Bl/Rbt Tlt
205	532 42 47-47	Skirt Side RH
206	532 42 47-48	Skirt Side LH
213	874 76 05-12	Bolt, Hex Head 5/16-18 x 3/4
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop Non/Stealth
228	532 19 51-61	Stud Fastner w/'D'anti-Rotatio
235	532 40 61-29	Spacer Fender
236	873 93 05-00	Nut Center Lock 5/16-18 unc
287 289	817 60 04-06 532 43 27-81	Screw Hex Washead 1/4-20 x 3/8 Plug Cruise Hook Phone
289 297	532 43 27-81	Insert Lens Rflct LH
231	302 10 02-07	HISSIT ESHS I HIGT ELL

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 DRIVE

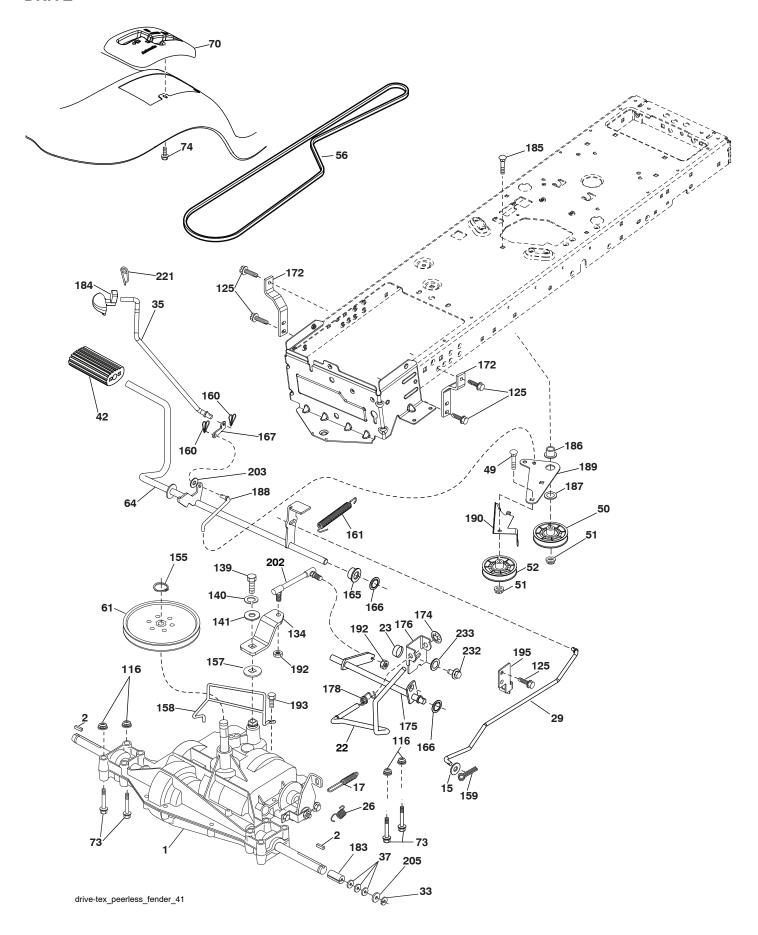

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2	532 12 35-83	Transaxle, Peerless 206-565 Key Square	160 161	532 16 94-84 532 10 57-09	Retainer Clip Spring, Return, Clutch
_ 15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	165	532 19 62-12	Busing Shaft Brake Hand Control
17	532 19 72-97	Spring, Brake	166	532 42 83-05	Nut Push .625
22	532 19 76-60	Rod Shift	167	532 40 52-57	Latch Brake Parking
23	532 10 69-33	Knob	172	532 19 76-57	Strap Torque LH
26	532 19 74-55	Spring Brake RTN	174	532 19 72-89	Nut Push
29	532 19 72-67	Rod, Brake	175	532 19 78-58	Shaft Asm Shift
33	812 00 00-01	Ring E	176	532 19 62-14	Arm Clevis Rod Shift
35	532 19 77-22	Rod, Brake, Park	178	532 19 74-56	Spring Shift
37	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.	183	532 13 70-57	Spacer, Axle
42	532 12 48-72	Cover, Foot Pedal	184	532 41 12-89	Handle Parking Brake
49	872 11 06-14	Bolt	185	872 11 06-22	Bolt
50	532 19 43-27	Pulley Idler Flat	186	532 19 43-21	Spacer Retainer
51	873 90 06-00	Lock Nut 3/8-16	187	819 13 32-10	Washer
52 56	532 19 43-26	Idler V-Groove	188	532 19 43-23	Link Clutch Ground Drive
56	532 19 43-46	V-Belt, Drive	189	532 19 43-17	Bellcrank Ground Drive
61 64	532 12 36-66 532 19 62-00	Pulley Transaxle Shaft Asm. Pedal Brake Control	190 192	532 19 43-18 532 15 03-60	Keeper Bellcrank Ground Drive Nut Lock Center 1/4-28
70	532 41 12-90	Console	193	817 06 05-12	Screw 5/16-18 x 3/4
73	874 49 05-44	Bolt 5/16-18 Gr. 5	195	532 19 73-32	Bracket Brake Rod
74	532 14 24-32	Screw 1/4 x 1/2	202	532 19 78-52	Link Shift
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
125	817 00 05-12	Screw 5/16-18 x 3/4	205	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
134	532 19 78-57	Arm Shift	221	532 40 31-87	Retainer Spring Clip Handle
139	874 55 04-12	Bolt 1/4-20 unf Gr. 8 w/Patch	232	874 78 07-16	Bolt 7/16-14 x 1 Gr. 5
140	810 04 04-00	Washer Lock Hvy Helical 1/4	233	532 40 52-96	Washer Serrated
141	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.			
155	812 00 00-28	Ring Retainer			
157	532 10 57-01	Washer Plate Shf			
158	532 19 43-52	Keeper T/A	NOTE	E: All componer	nt dimensions given in U.S. inches
159	876 02 04-12	Pin Cotter 1/8 x 3/4		1 inch = 25.4	

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 ENGINE

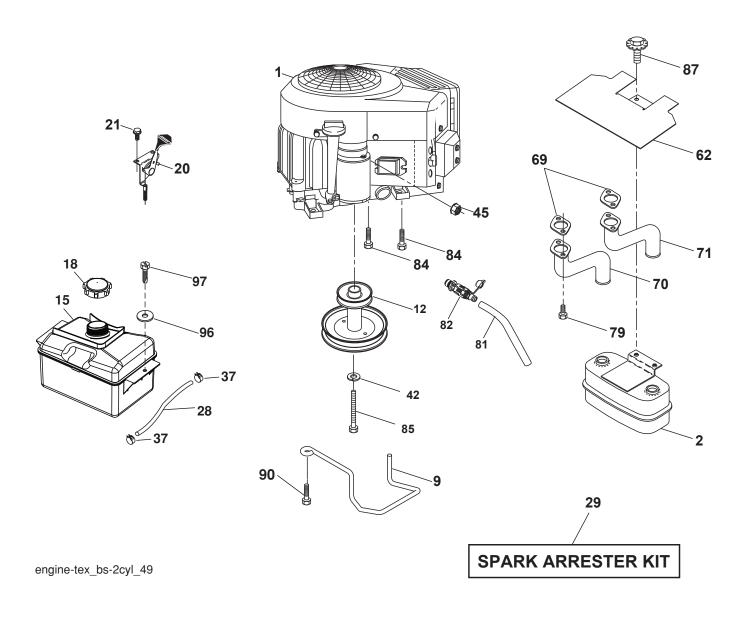

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 ENGINE

KEY	PART	
NO.	NO.	DESCRIPTION
1		Engine B&S Model No. 406777-0442-B1
2	532 14 97-23	Muffler
9	532 19 43-19	Keeper Belt Engine
12	532 40 19-85	Pulley Engine
15	532 40 74-89	Tank Fuel
18	532 43 02-20	Cap Fuel
20	532 42 35-02	Control Throttle/Choke
	532 41 63-58	Screw #10 x 0.750 BOS Thread
28	532 40 11-37	
29		Spark Arrester Kit
	532 12 34-87	Clamp Hose
42		Washer Lock 7/16
45		Nut Keps Hex 1/4-20 unc
	532 14 66-29	
69	532 16 53-91	
70		Exhaust Tube LH
71		Exhaust Tube RH
79	532 18 39-06	Screw Socket HD 5/16-18 x 1
81	532 14 84-56	Tube Drain Oil Easy
82		
84	817 06 06-20	Screw 3/8-16 x 1-1/4
85		Bolt 7/16-20 x 4 x Gr. 5-1.5
87		Bolt 5/16-18 unc x 3/4
90		Screw 3/8-16 x 1
96		Washer 9/32 x 7/8 x 16 Ga.
97	817 67 04-12	Screw 1/4-20 x 3/4

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


For engine service and replacement parts, call the toll free number for your engine manufacturer listed below:

Briggs & Stratton 1-800-233-3723

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 STEERING ASSEMBLY

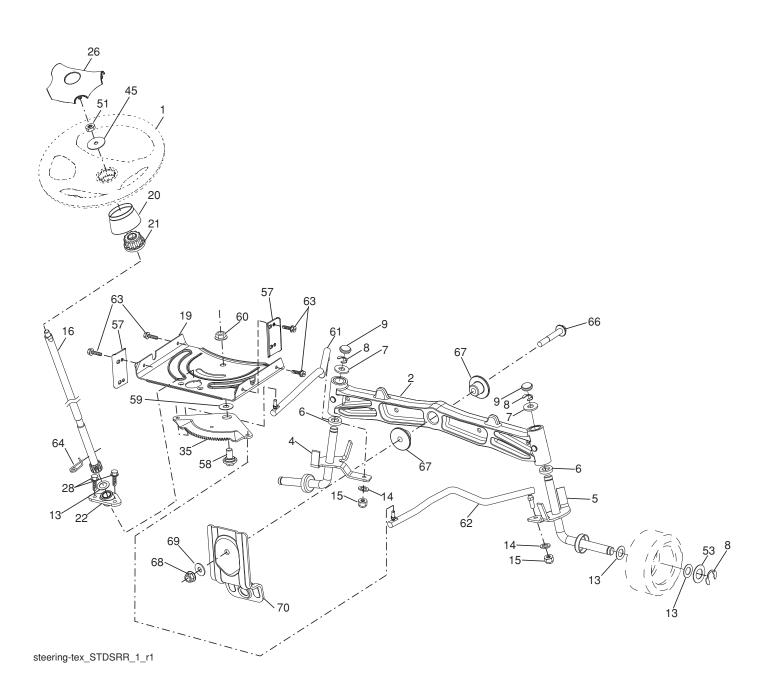


TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering
2	532 19 59-68	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Harden
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13 14	532 12 17-49 810 04 06-00	Washer 25/32 x 1-1/4 x 16 Ga.
15	873 54 06-00	Washer, Lock Hvy Hlcl Spr 3/8 Nut, Crown Lock 3/8-24 unf
16	532 40 82-19	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 43 27-84	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Steering Support Lower
26	532 42 46-91	Insert, Wheel Steering
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	819 18 38-12	Washer 9/16 ID x 2-3/8 x 12 Ga.
51	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59 60	532 19 47-48	Washer Thrust Sector Steering
60 61	873 97 10-00 532 19 47-40	Nut Flange Lock 5/8-11 Draglink, LH
62	532 19 47-40	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 MOWER DECK

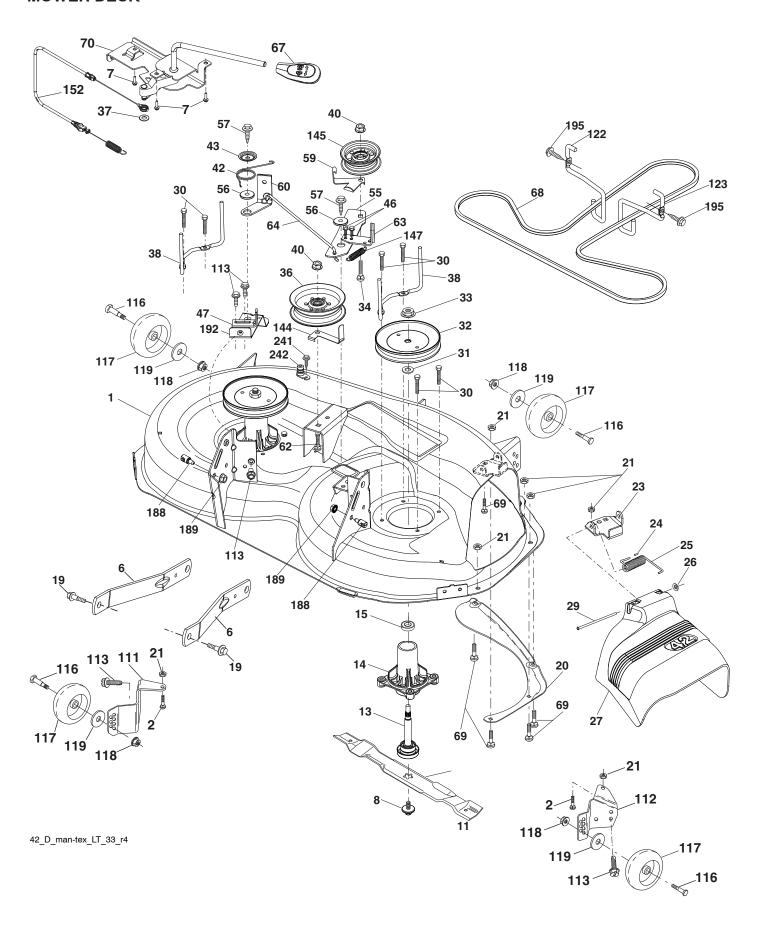

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 MOWER DECK


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 64-95	Mower Housing	57	817 00 06-16	Screw Hexwsh Thd 3/8-16 x 1
6	532 19 51-86	Arm Suspension	59	532 14 10-43	Guard, Tuv Idler (94)
7	532 41 63-58	Screw #10 x 0.750 BOS Thread	60	532 19 72-61	Arm Brake Mower
8	532 19 30-03	Bolt/Washer Asm 7/16-20 unf	62	872 11 06-16	Bolt Rdhd Sqnk 3/8-16 unc x 2
11	532 13 89-71	Blade, 42" Hi-Lift	63	532 19 94-77	Arm Brake Mower
		(For bagging or discharge)	64	532 19 97-90	Linkage Brake
	532 13 97-75	Blade, 42" Mulching Premium	67	532 40 30-12	Handle, Clutch Cable
		(For better wear when mulching)	68	532 42 96-36	V-Belt
	532 13 41-49	Blade, 42" Mulching Std	69	872 14 05-05	Bolt Rdhd Sqnk 5/16-18 x 5/8
		(For mulching mowers only)	70	532 19 97-79	Clutch Asm. Manual
	532 42 47-52	Blade 42SP" 3N1	111	532 40 47-84	Bracket Wheel Gauge LH
	532 42 27-19	Blade 42SP" Premium	112	532 40 47-85	Bracket Wheel Gauge RH
13	532 19 28-72	Shaft Assembly, Mandrel	113	817 00 05-10	Screw 5/16-18
14	532 18 72-81	Housing, Mandrel	116	532 00 48-98	Bolt Shoulder "A" 2.41 "B" 1.66
15	532 11 04-85	Bearing, Ball, Mandrel	117	532 18 86-06	Wheel Gage
19	532 19 65-39	Bolt, Shoulder	118	873 93 06-00	Nut Centerlock 3/8-16 unc
20	532 15 97-70	Baffle, Vortex	119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
21	873 68 05-00	Nut, Crownlock 5/16-18 unc	122	532 19 72-58	Keeper Belt Eng. LH
23	532 19 25-57	Bracket, Deflector	123	532 19 72-59	Keeper Belt Eng. RH
24	532 10 53-04	Cap, Sleeve	144	532 19 92-04	Keeper Belt_
25	532 19 70-26	Spring, Torsion, Deflector	145	532 19 31-97	Pulley Idler Primary
26	532 11 04-52	Nut, Push	147	532 40 19-71	Spring Return
27	532 40 30-04	Shield, Deflector	152	532 40 87-14	Cable Clutch Manual w/Spr.
29	532 13 14-91	Rod, Hinge	188	532 19 51-61	Stud Fastener
30	532 17 39-84	Screw Thdrol Rolling Wsh Hd	189	873 90 05-00	Nut Lock Hex Flange
31	532 18 76-90	Washer, Spacer	192	532 19 72-60	Bracket Brake Stand LH
32	532 19 74-73	Pulley, Mandrel	195	817 00 06-12	Screw Hexwsh Thdr 3/8-16 x 3/4
33	532 40 02-34	Nut, Toplock, Flanged	241	532 15 29-27	Screw #10-32.5 3/8 Flange
34	872 11 06-12	Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5	242	532 41 55-98	Port Washout
36	532 19 73-79	Pulley, Idler 4.50 RAW		532 19 28-70	Mandrel Assembly (Includes
37	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.			housing, shaft assembly, and
38	532 19 91-89	Keeper Belt LH Mandrel			bearing only - pulley/nut/washer
40	873 90 06-00	Nut, Lock Flg. 3/8-16 unc			and blade bolt/washers not in-
42	532 19 84-10	Spring Torsion Brake			cluded)
43	532 19 72-56	Spring Torsion Retainer		532 43 25-66	Replacement Mower, Complete
46	532 13 77-29	Screw Thd Roll 1/4-20 x 5/8			
47	532 19 72-50	Bracket Clutch Cable	NOT	- All	
55	532 19 72-49	Arm, Idler	NOT		nt dimensions given in U.S. inches
56	532 19 90-92	Spacer, Retainer		1 inch = 25.4	mm

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 MOWER LIFT

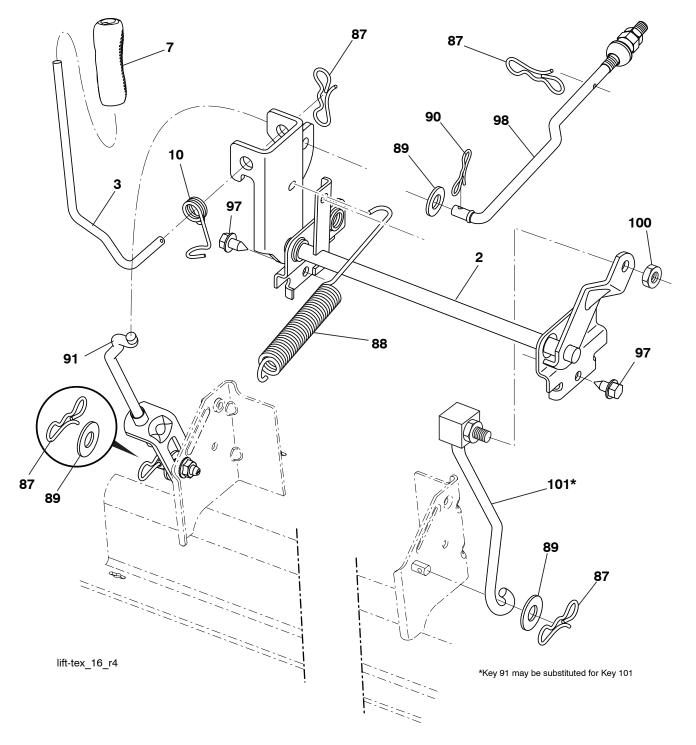


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
2	532 42 20-27	Shaft Asm., Lift	97	817 00 06-12	Screw 3/8-16 x .75 Smgml Tap/R.Z
3	532 19 52-31	Lever Asm., Lift RH	98	532 19 52-70	Link Lift Susp. Front Mower
7	532 41 15-55	Grip, Lever	100	873 93 06-00	
10	532 19 63-14	Spring Torsion	101	532 40 70-03	Link Asm. Lift Fixed
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock			
88	532 41 07-10	Spring Lift Assist			
89	819 19 19-12	Washer Clear Zinc	NOTE	- All compone	nt dimensions given in U.S. inches
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock	11011	1 inch = 25.4	
91	532 19 51-81	Link Asm. Lift Rear		1 111011 – 20.1	

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 SEAT ASSEMBLY

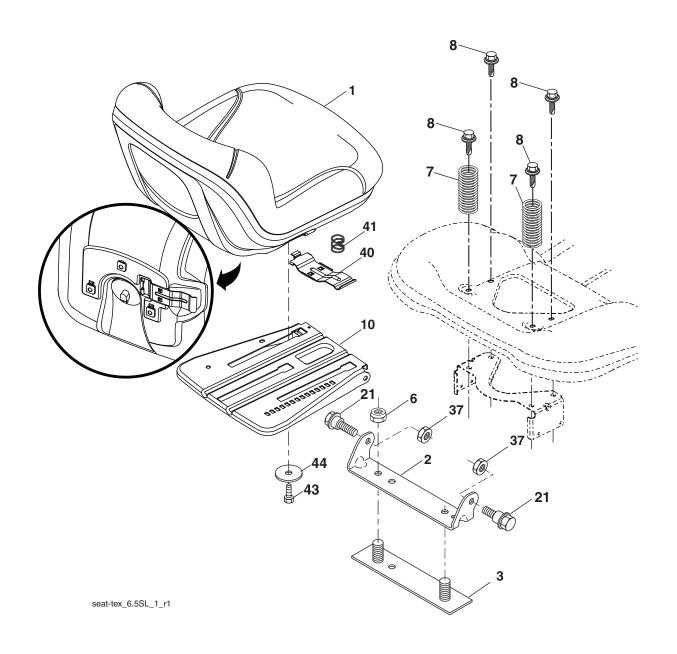


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-23	Seat	37	873 80 05-00	Nut, Lock 5/16-18 unc
2	532 18 01-66	Bracket Pivot Fender	40	532 19 76-61	Handle Slide Seat
3	532 14 06-75	Strap, Asm Fender	41	532 19 82-00	Spring Latch Seat
6	873 80 06-00	Nut, Lock w/lns. 3/8-16 unc	43	874 76 06-12	Bolt Fin Hex 3/8-16 unc x 3/4
7	532 12 41-81	Spring, Seat Cprsn	44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems			
10	532 19 69-77	Pan, Seat	NOTI		nt dimensions given in U.S. inches
21	532 17 18-52	Bolt, Shoulder 5/16-18		1 inch = 25.4	mm

TRACTOR - MODEL NO. MC2042YT (96042011500), PRODUCT NO. 960 42 01-15 DECALS

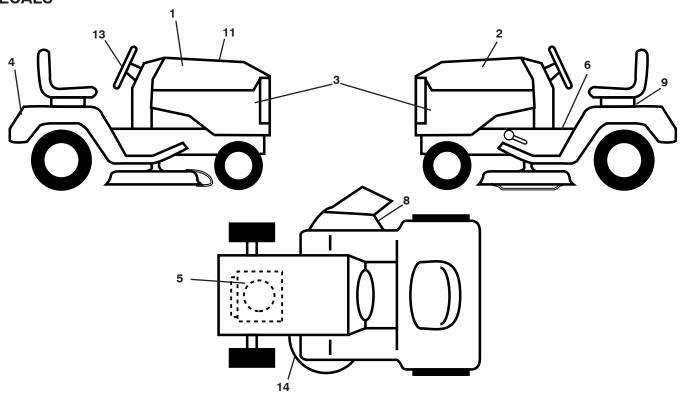

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 40 82-58	Decal, Hood RH	14	532 16 03-96	Decal, Mower Schematic
2	532 40 82-59	Decal, Hood LH		532 41 12-73	Pad, Footrest RH
3	532 43 24-62	Decal, Side Panel		532 40 95-05	Pad, Footrest, LH
4	532 43 24-63	Decal, Fender		532 43 25-62	Manual, Operator's (English/French)
5	532 42 95-61	Decal, Eng H.P.		532 43 25-63	Manual, Operator's (Spanish)
6	532 41 16-58	Decal, Fender Operator's		532 43 25-64	Manual, Parts (English)
8	532 17 05-63	Decal, Warning			, ,
9	532 14 50-05	Decal, Battery Dnge/Poi			
11	532 43 00-85	Decal, Replacement			
13	532 42 42-36	Decal, Steering Wheel			

WHEELS AND TIRES

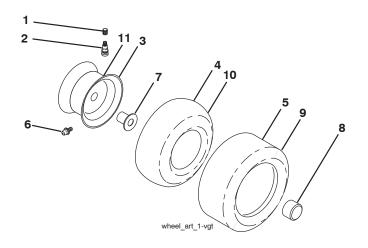

KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap, Valve, Tire
2	532 06 51-39	Stem, Valve
3	532 12 51-21	Rim Assembly, Front
4	532 05 99-04	Tube, Front
5	532 10 62-22	Tire, Front
6	532 12 49-57	Fitting, Grease
7	532 12 49-59	Bearing, Flange
8	532 19 32-68	Cap, Axle (Front Wheel Only)
9	532 42 05-31	Tire, Rear 18 x 9.5-8 Turf Saver
10	532 12 49-26	Tube, Rear
11	532 12 51-22	Rim Assembly, Rear
	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

SERVICE NOTES

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

HOP Outdoor Products Customer Service Dept. 1030 Stevens Creek Road Augusta, GA 30907 USA In Canada contact: HOP 5855 Terry Fox Way Mississauga, Ontario L5V 3E4

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.

