


SNÖBLAD  
PUSKULEVY  
SNØSKJÆR  
SCHNEERÄUMSCHILD  
SNOW BLADE  
SNESKRABER  
CHASSE-NEIGE







Instruktion  
Käyttöohjeet  
Instruksjon  
Bedienungsanleitung  
Instructions  
Brugsanvisning  
Manuel d'utilisation



967 28 00-01








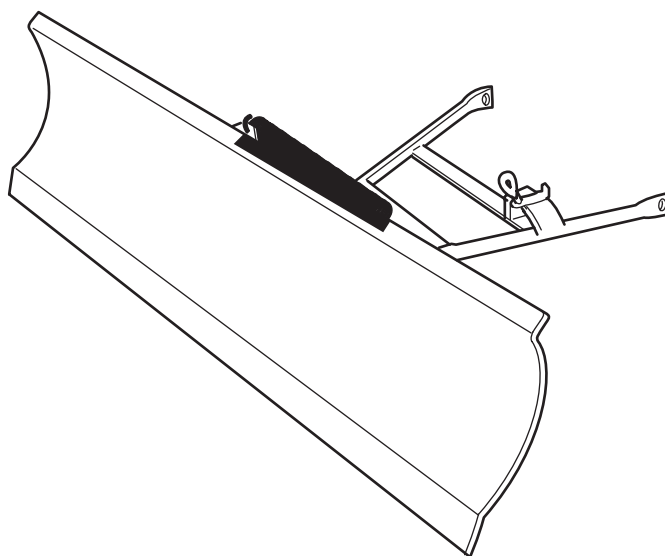





T-30357







MADE BY KOVA

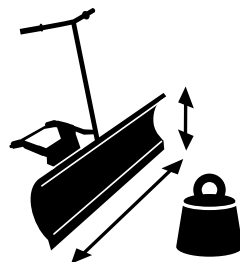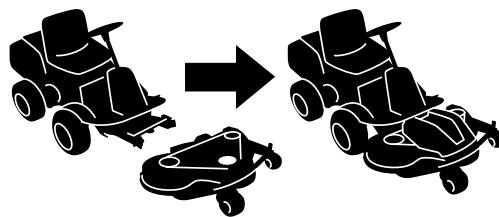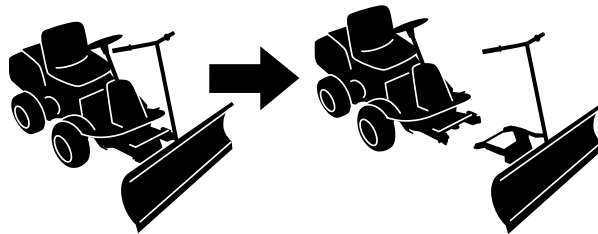
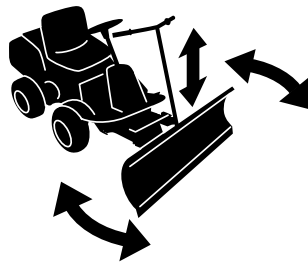
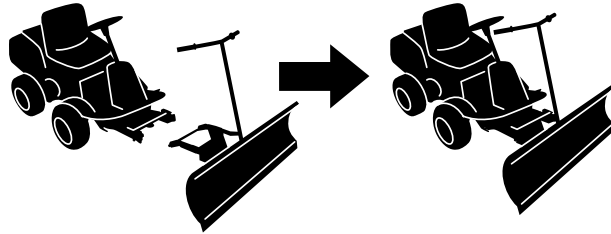
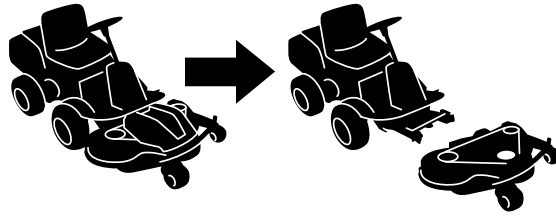







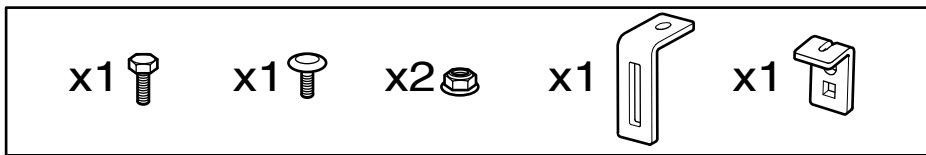
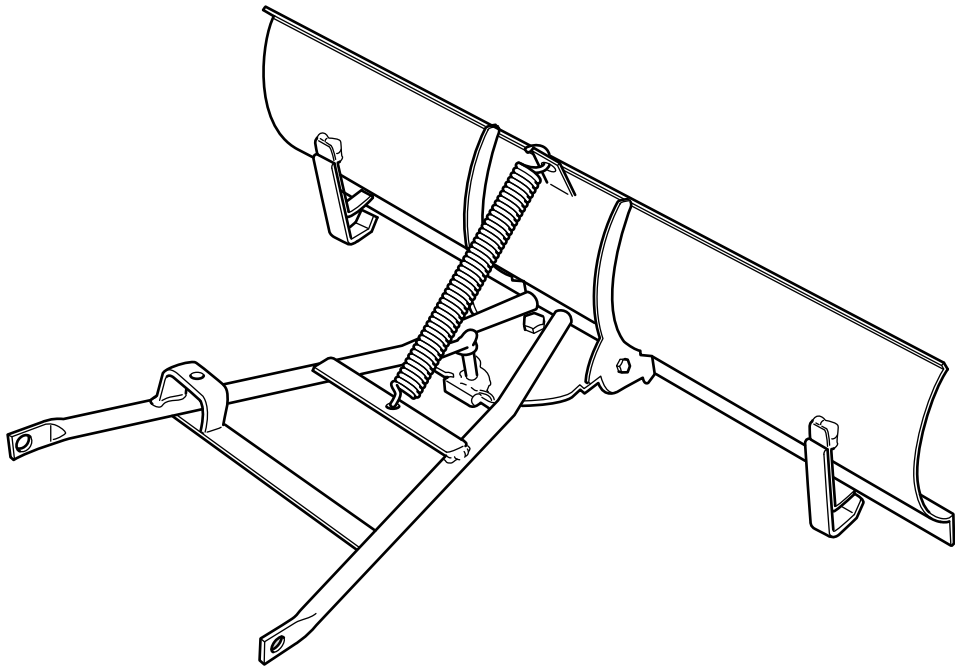


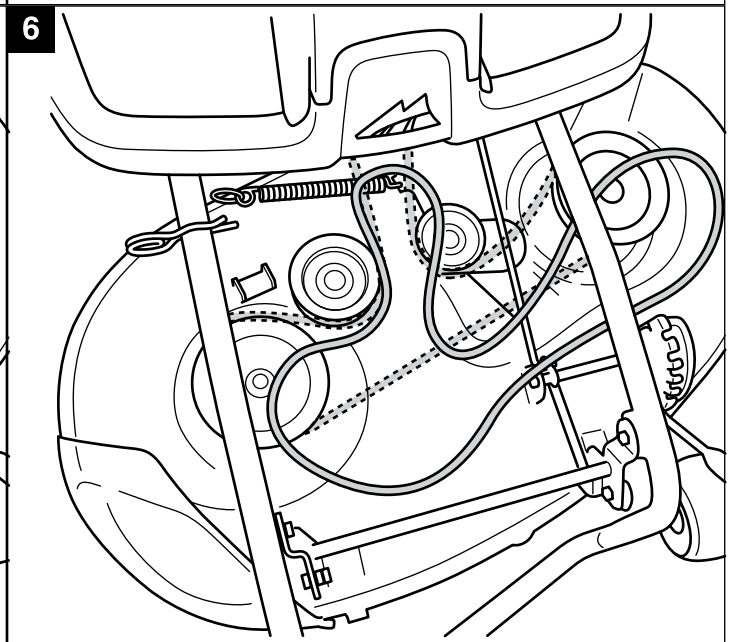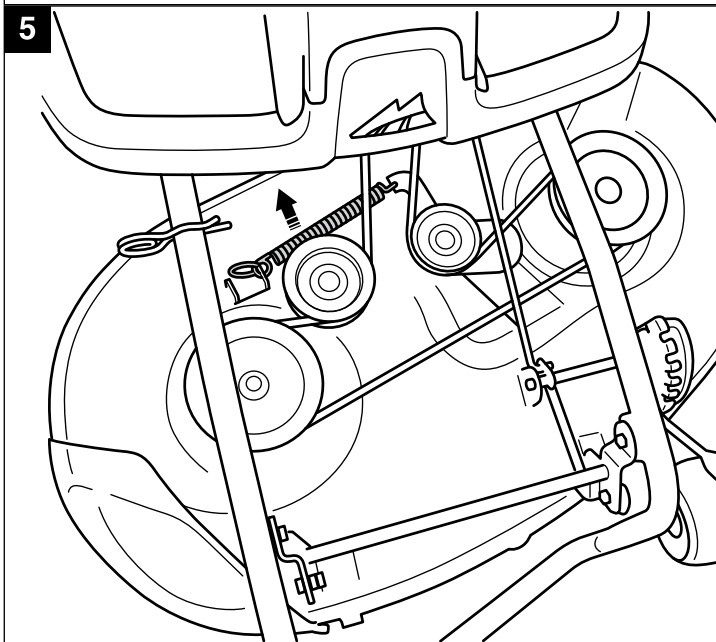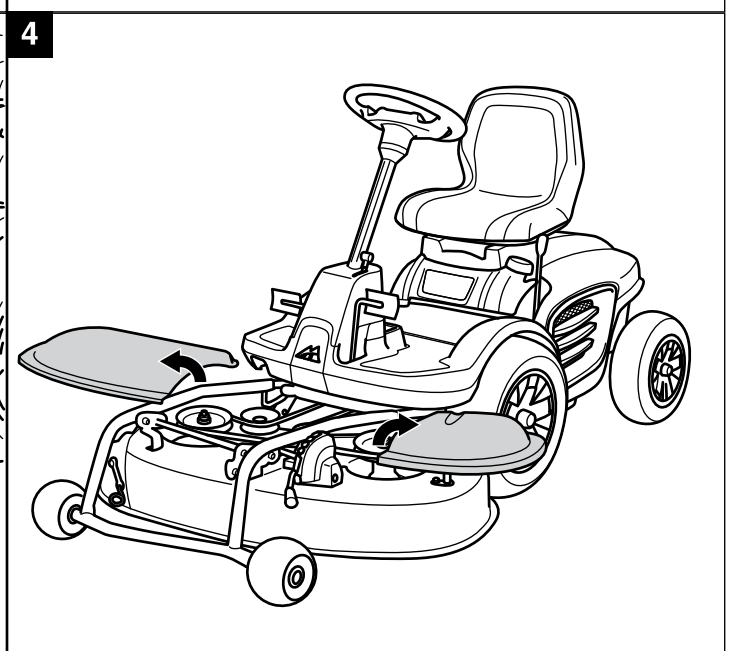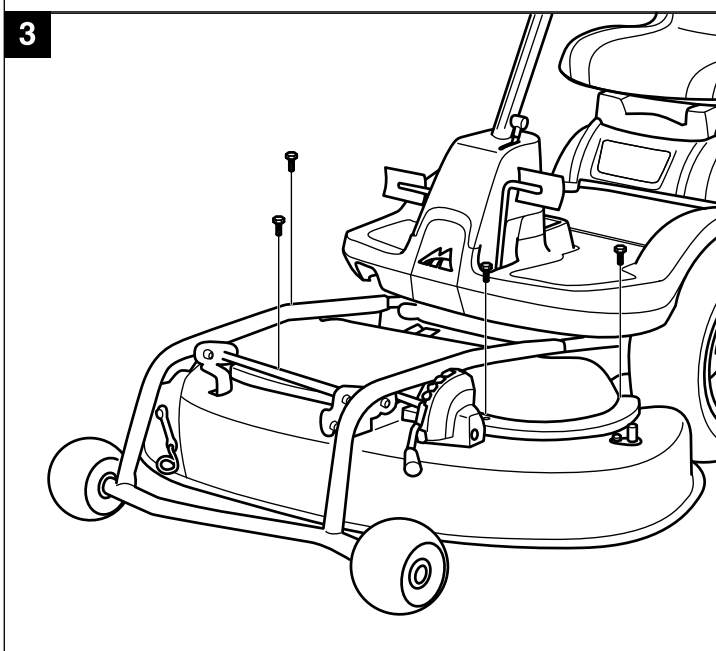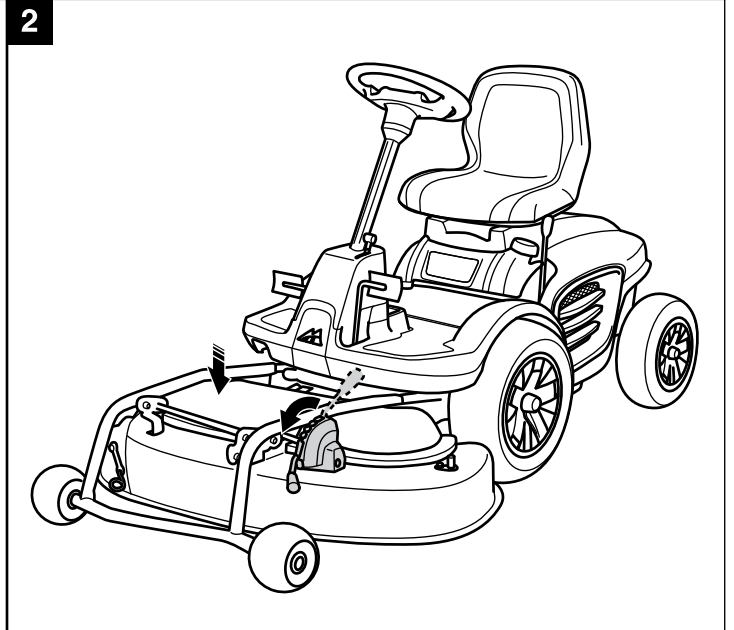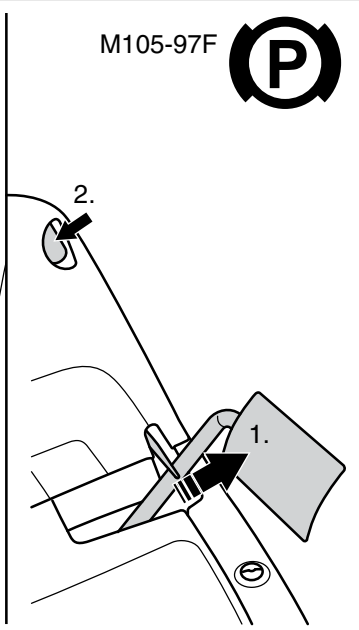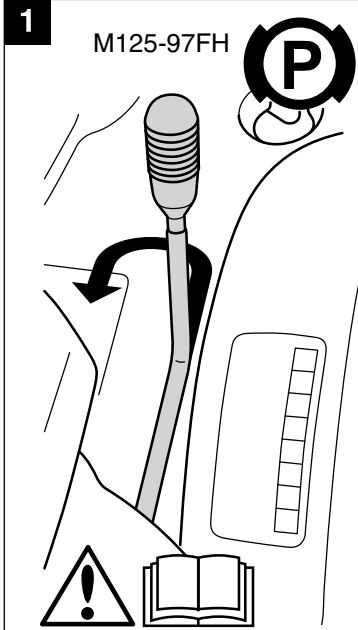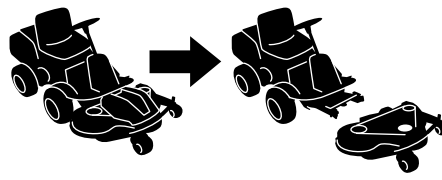

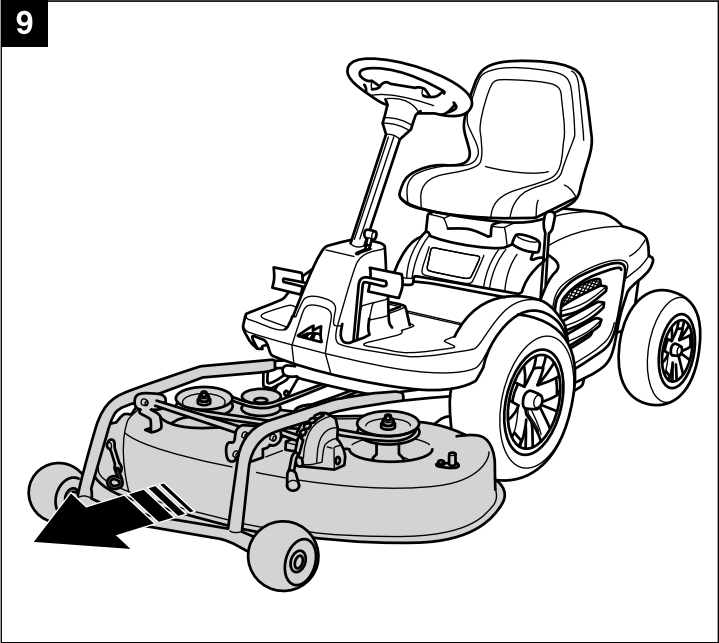
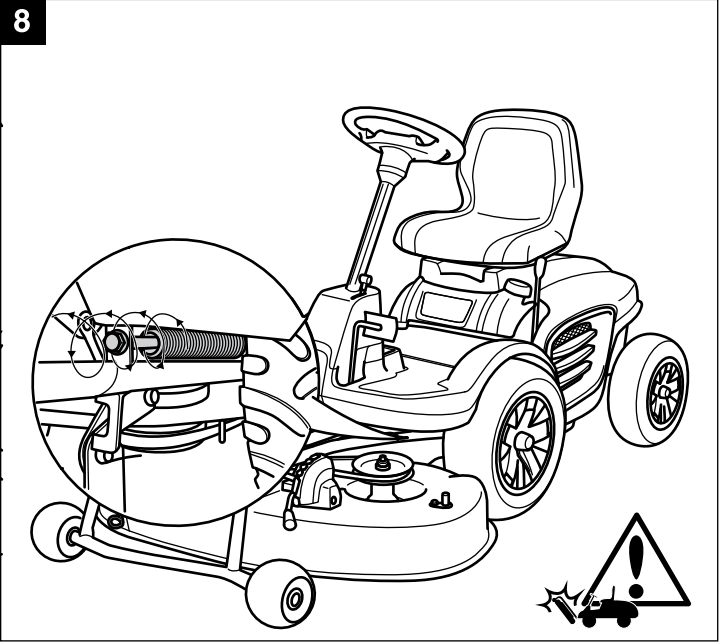
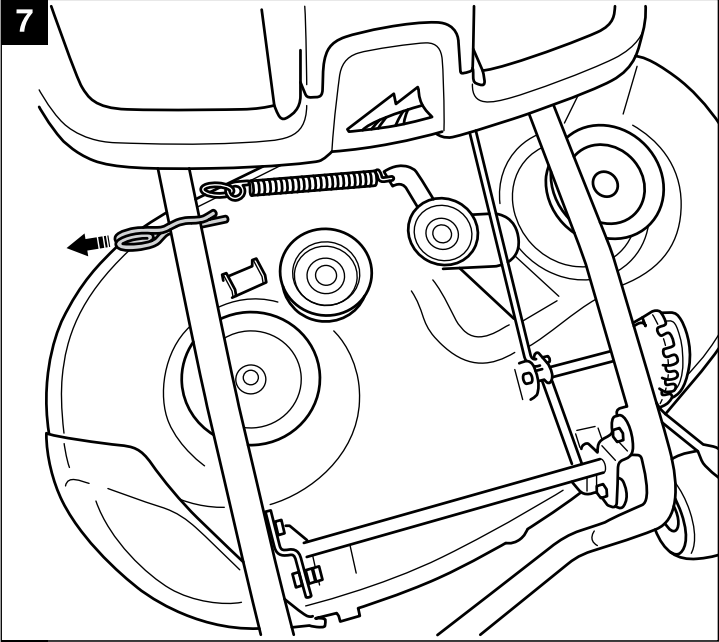


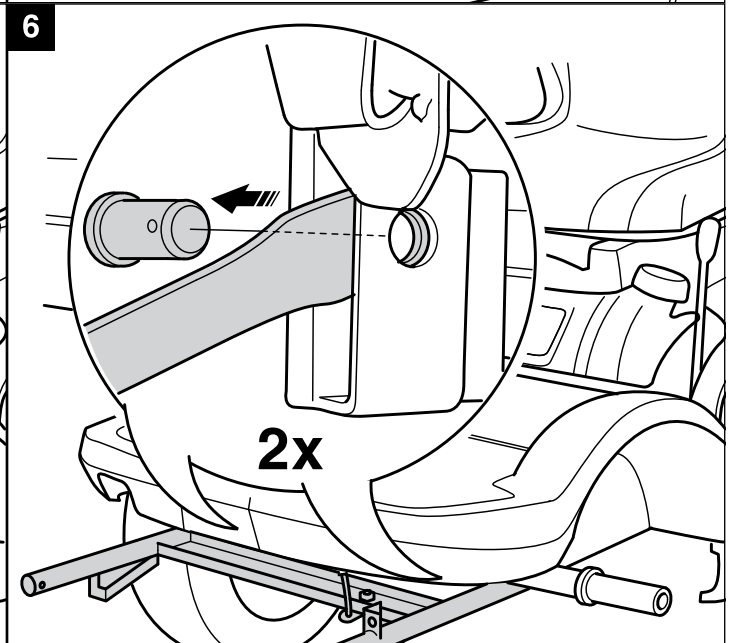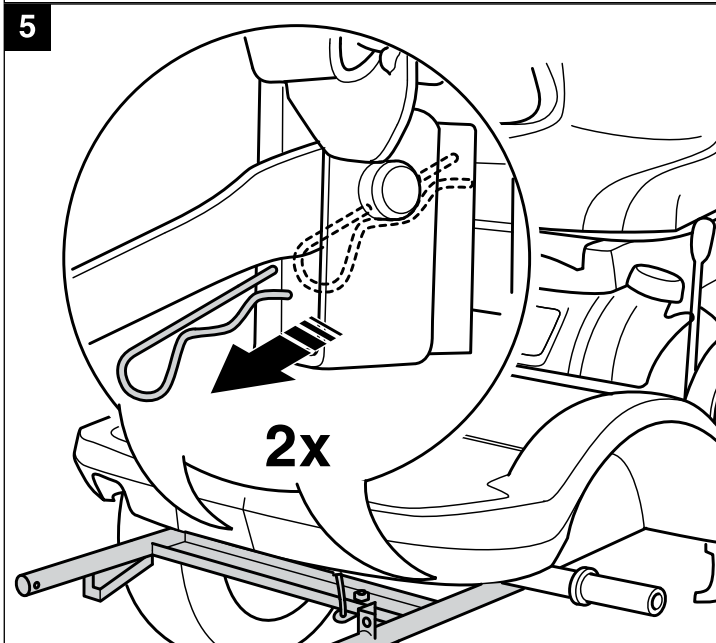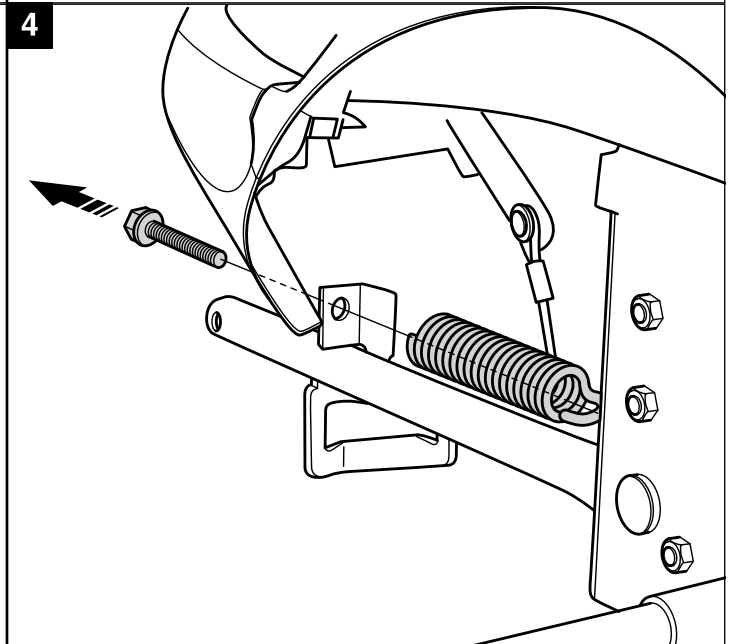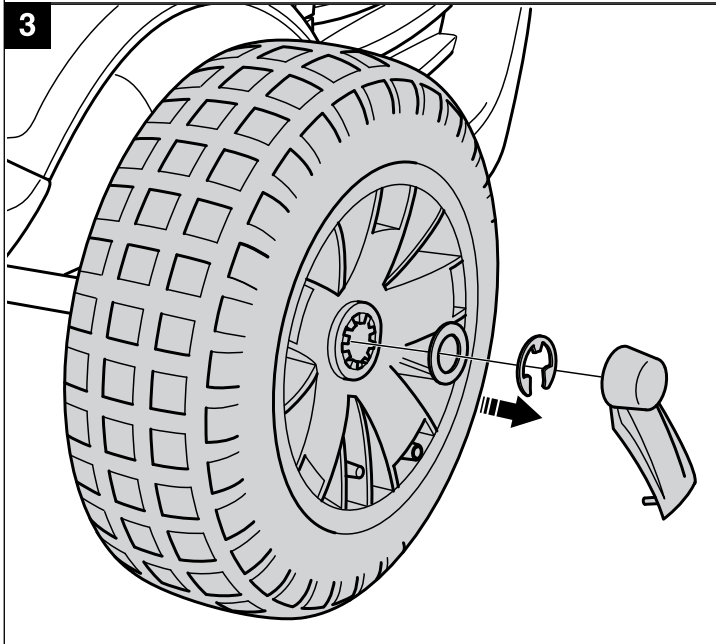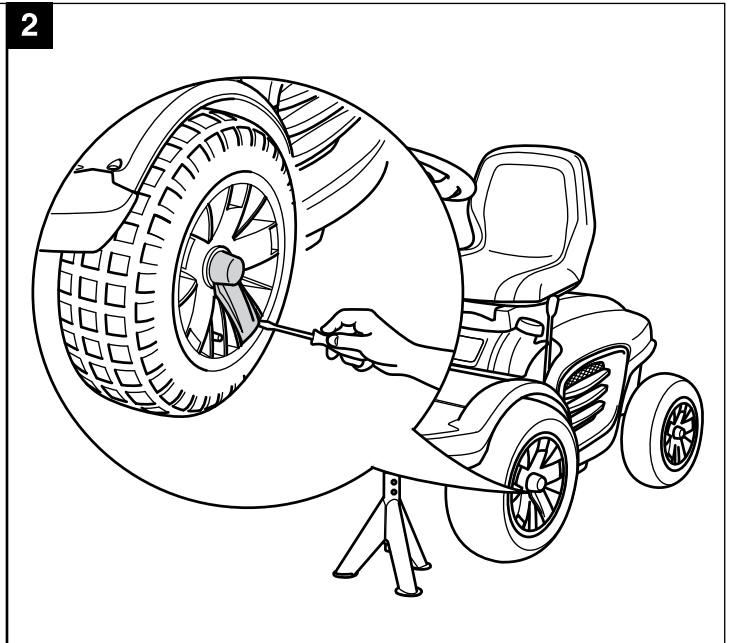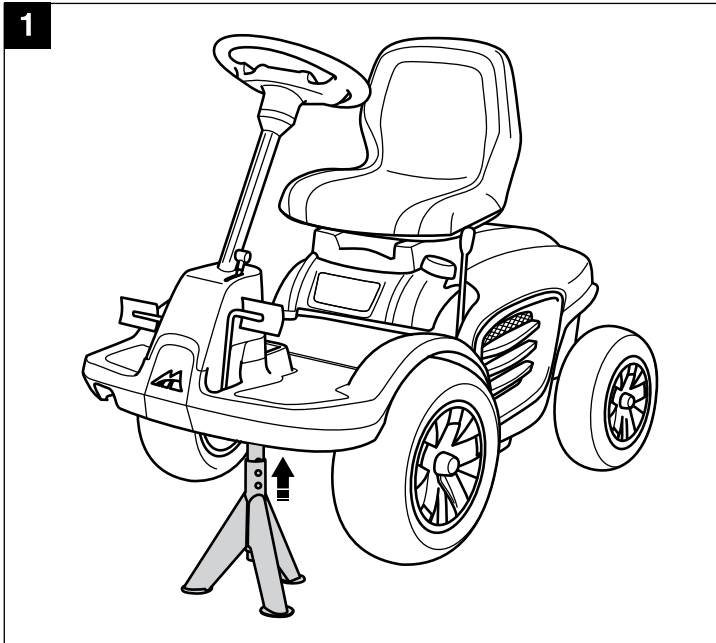





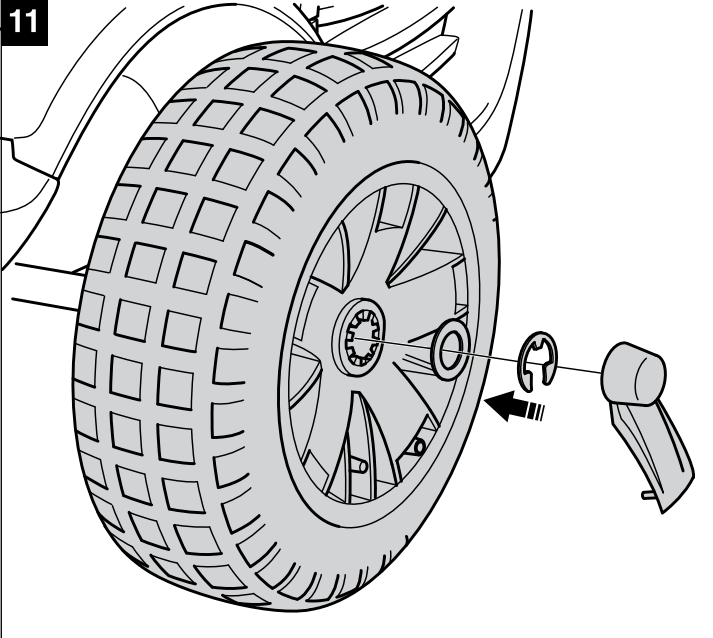
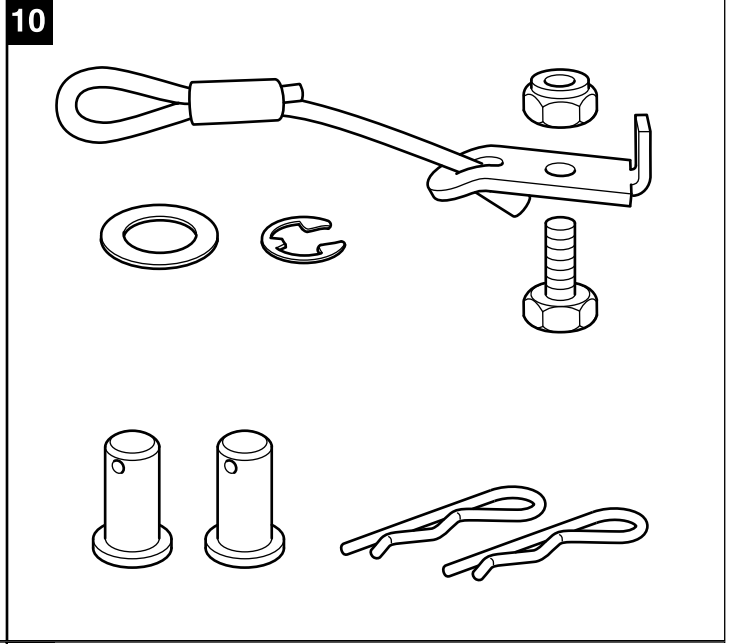
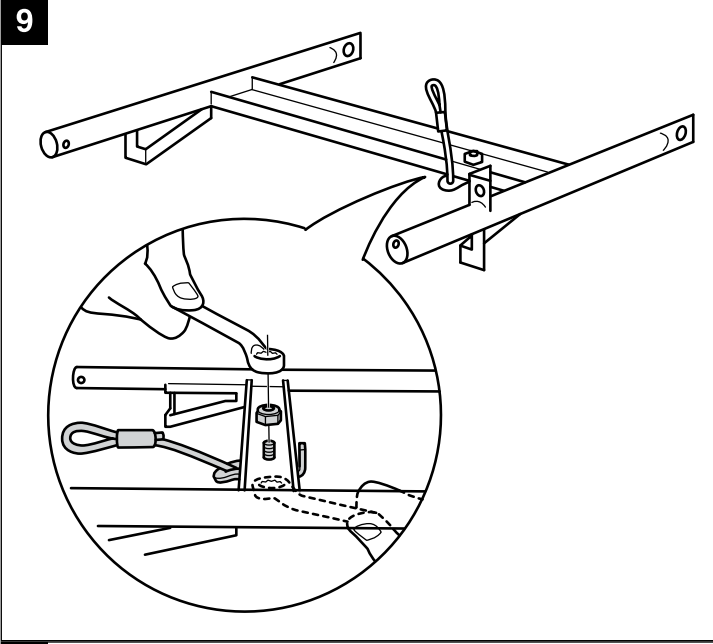
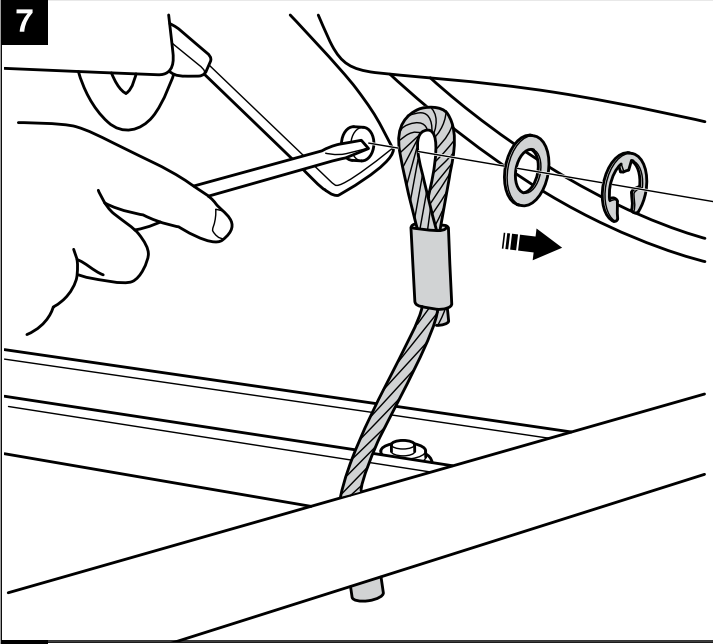


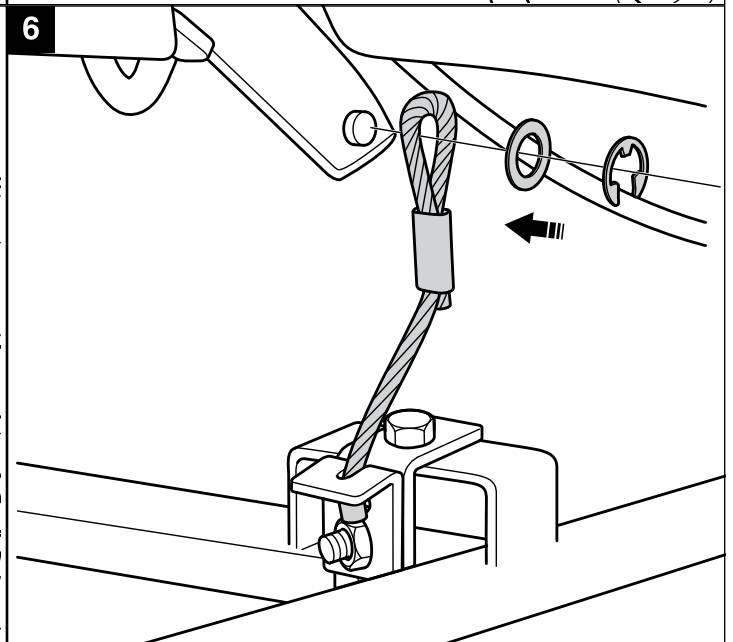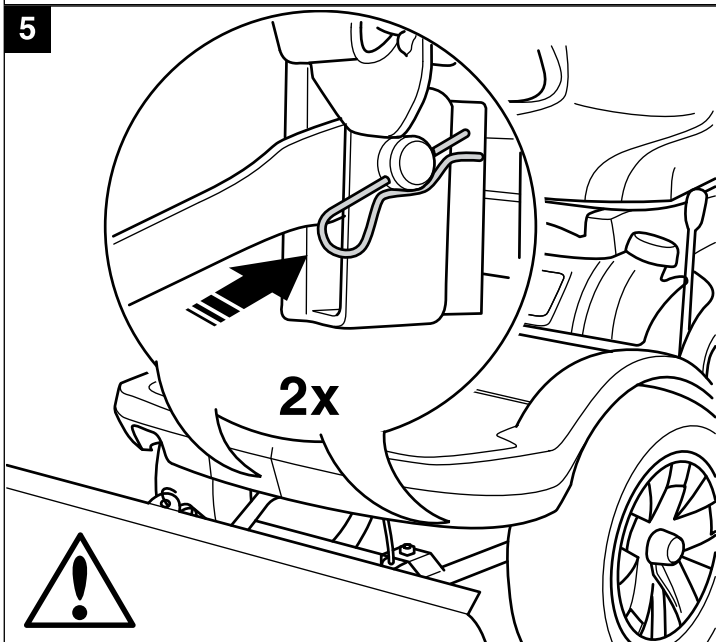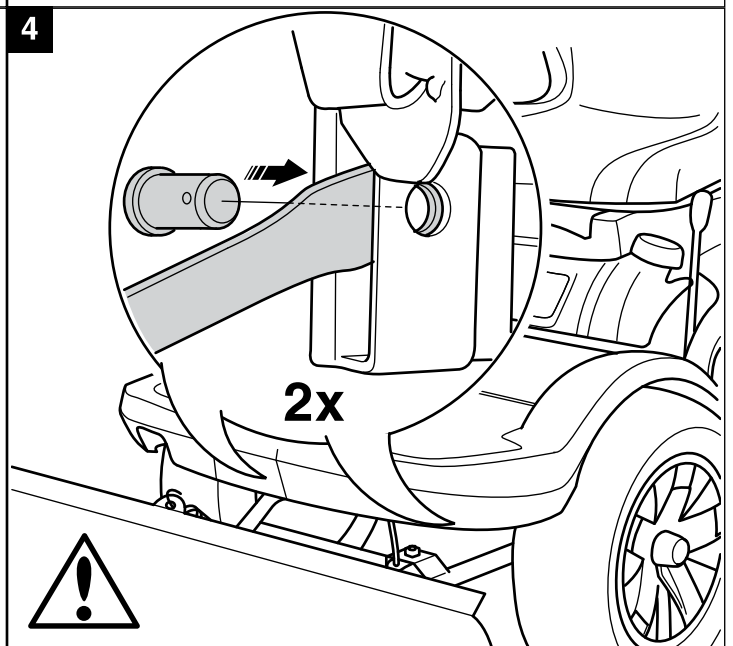
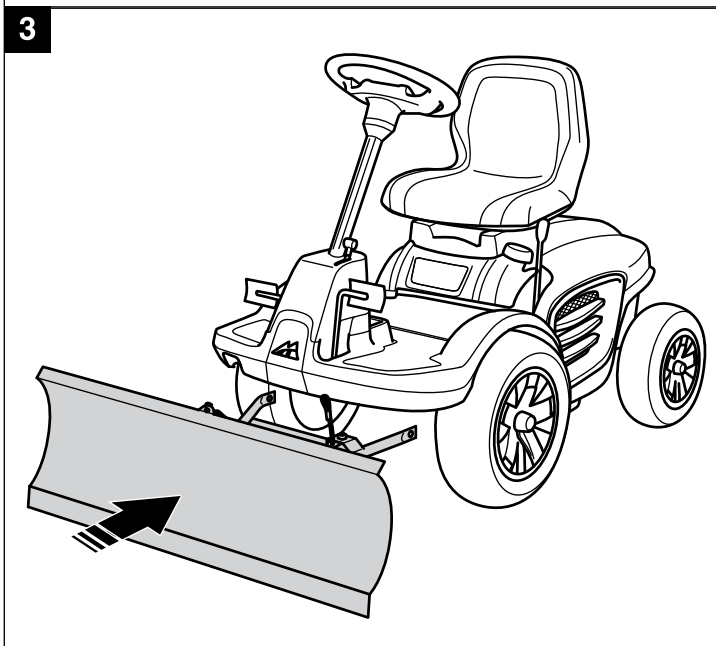
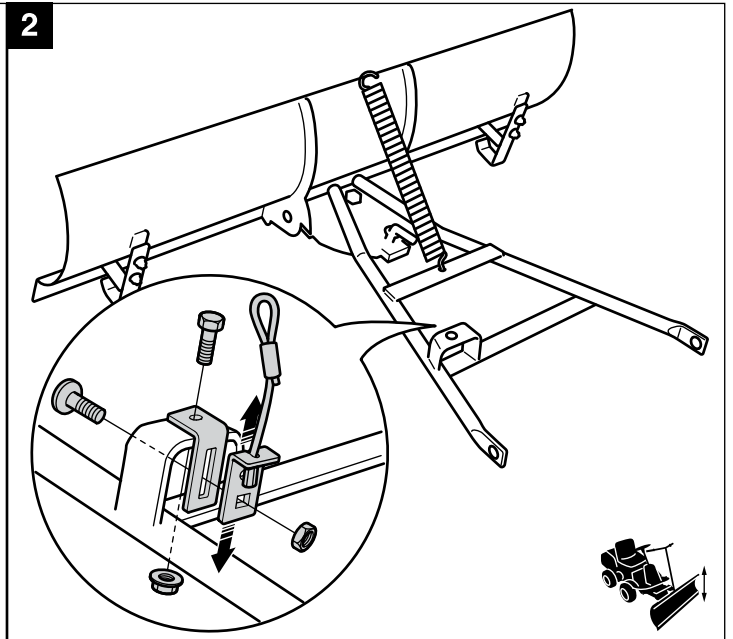
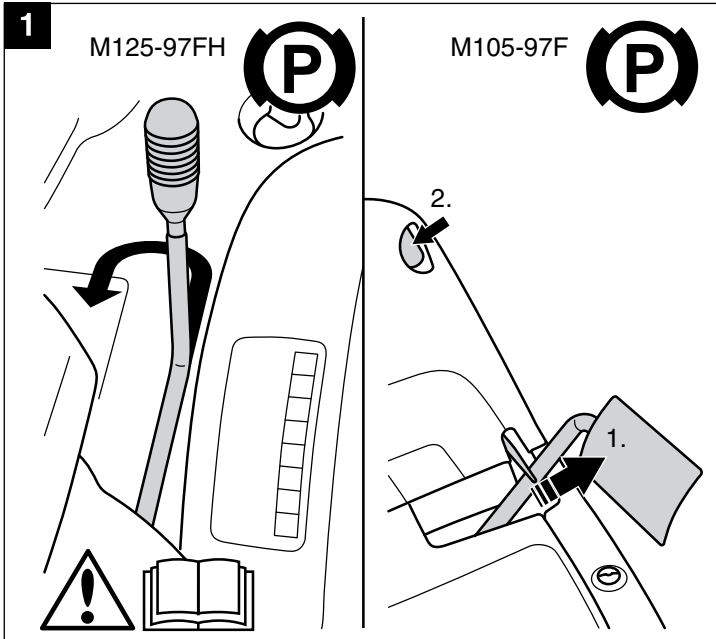
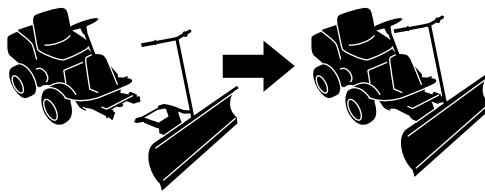




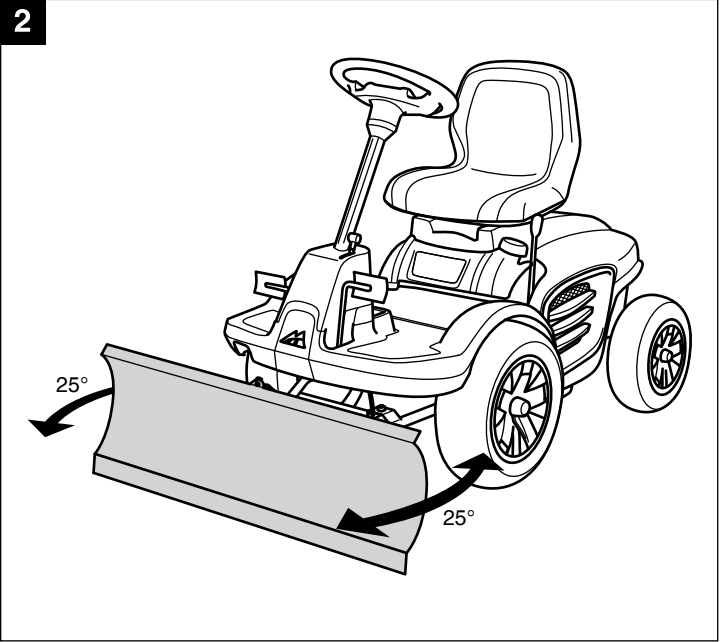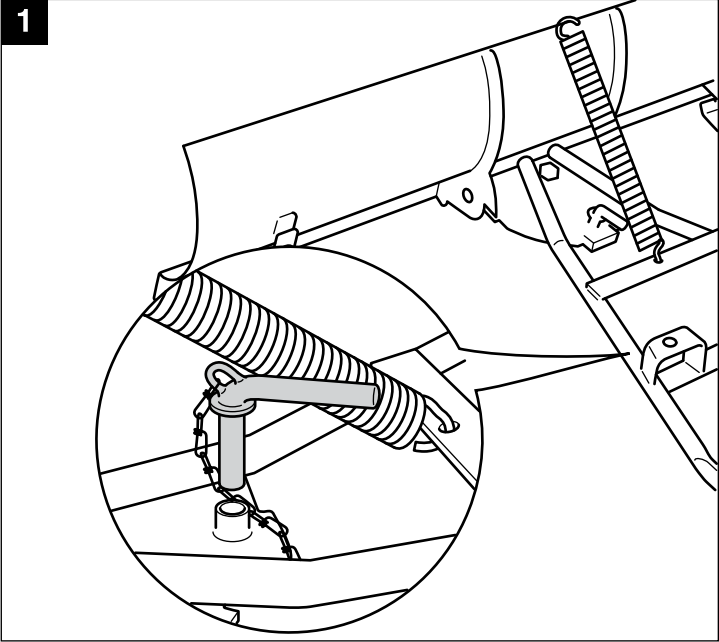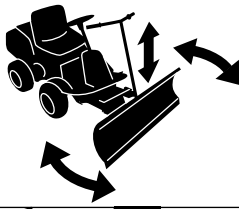


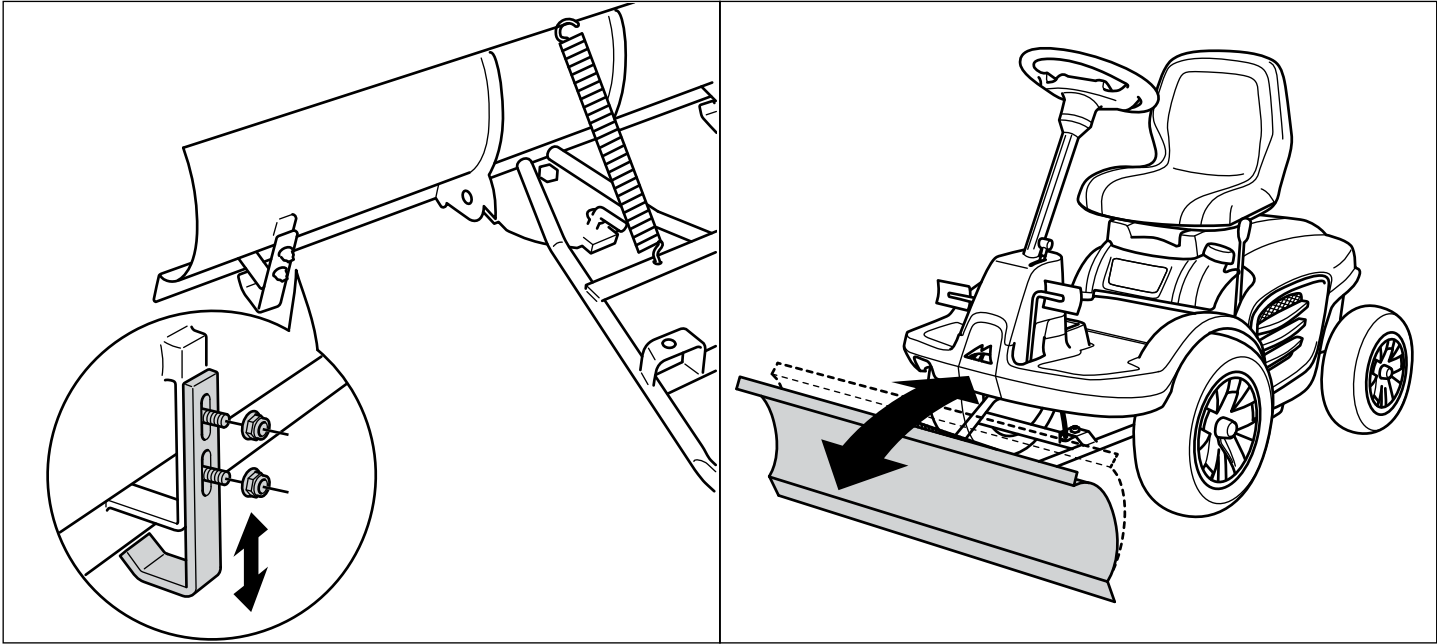

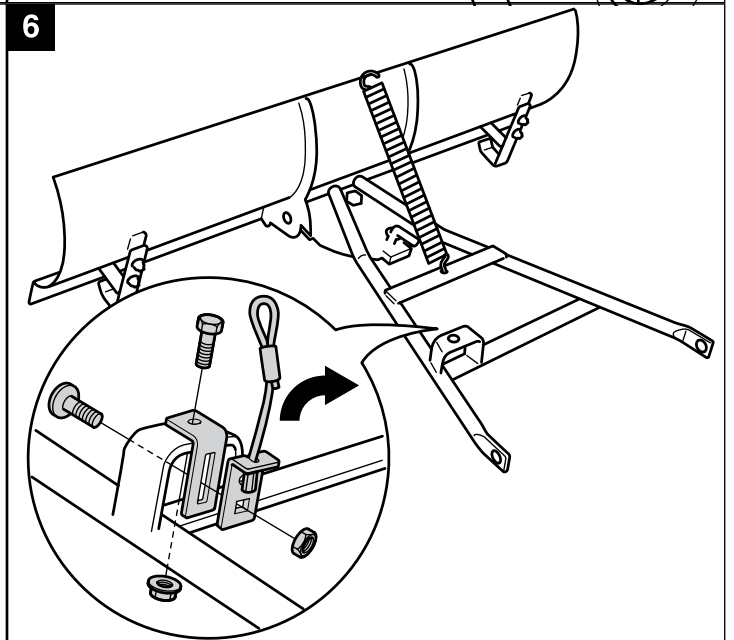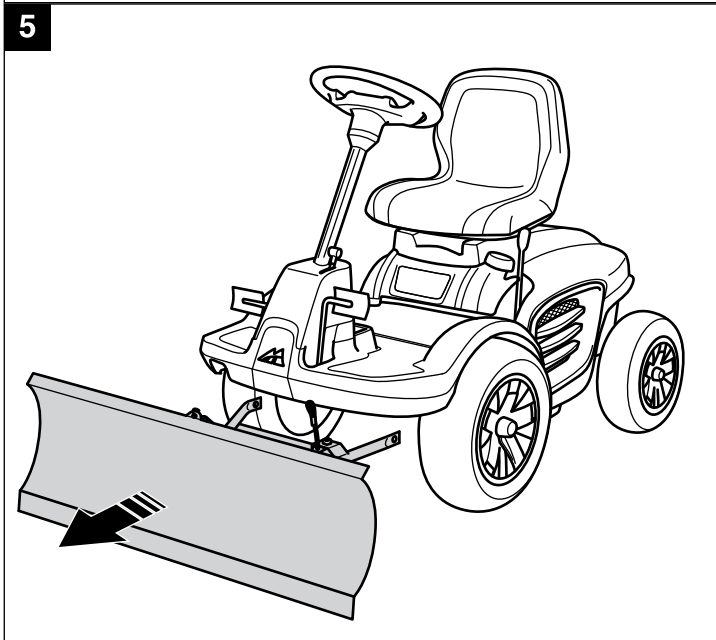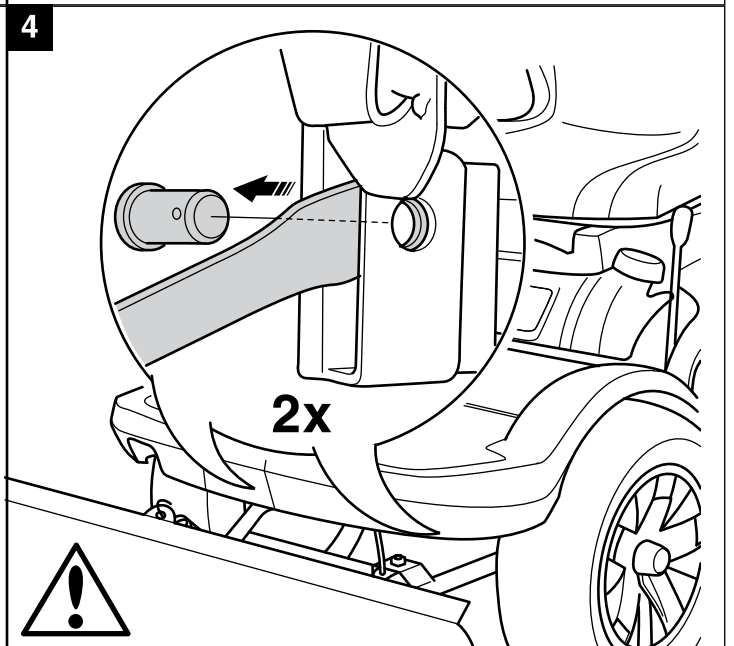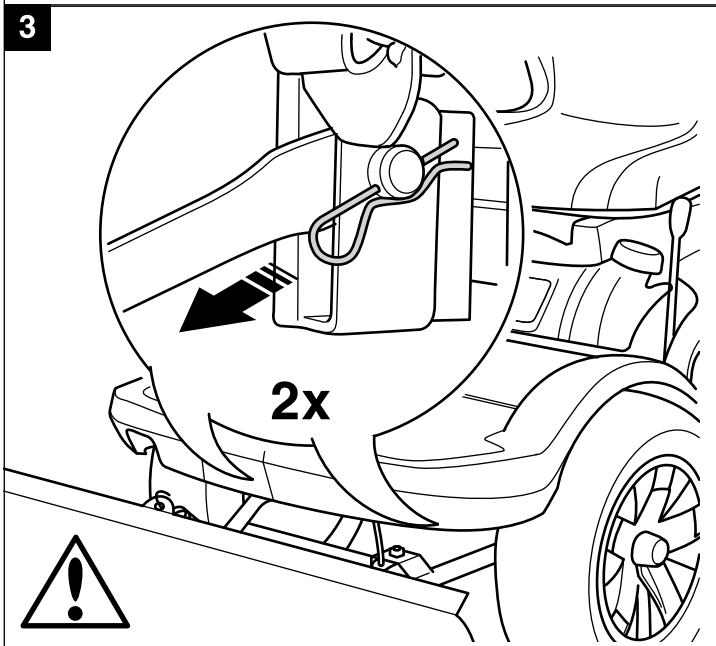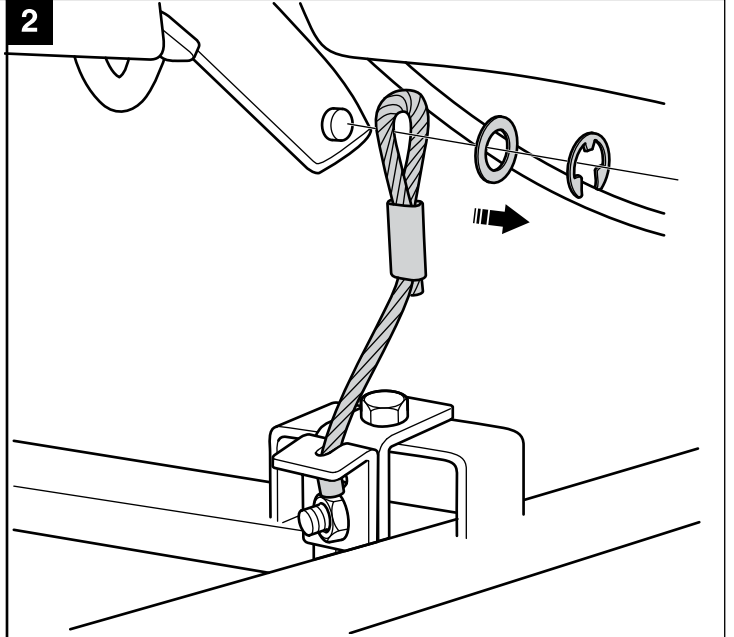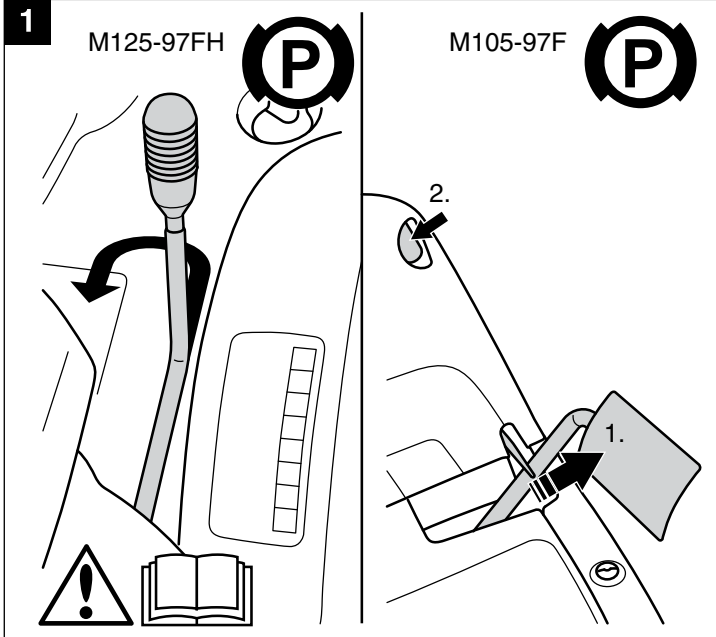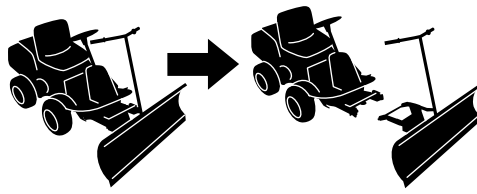


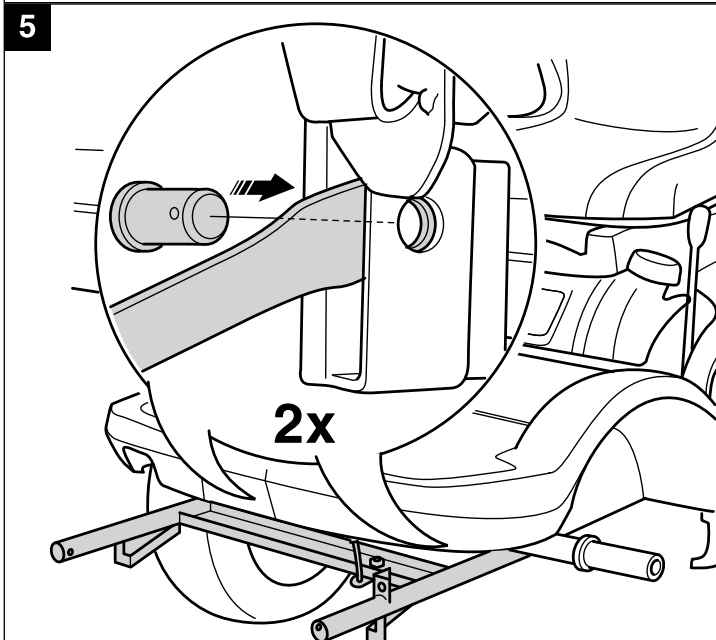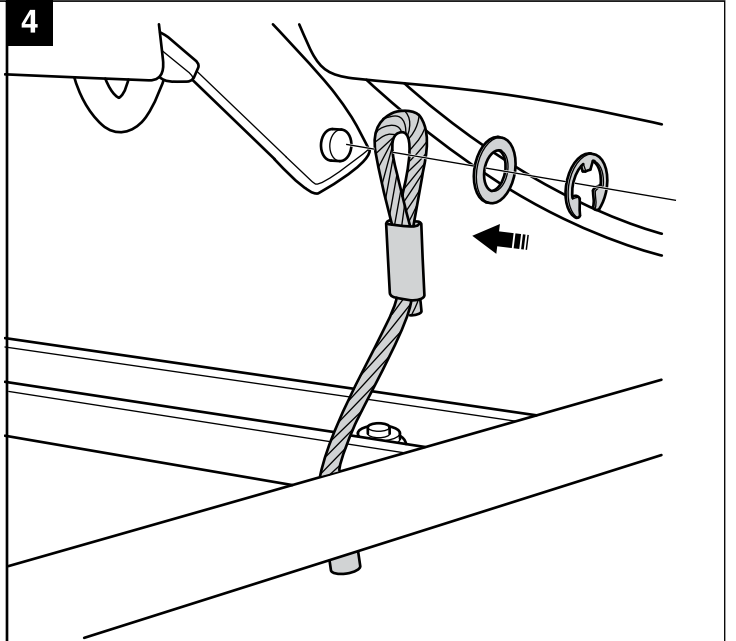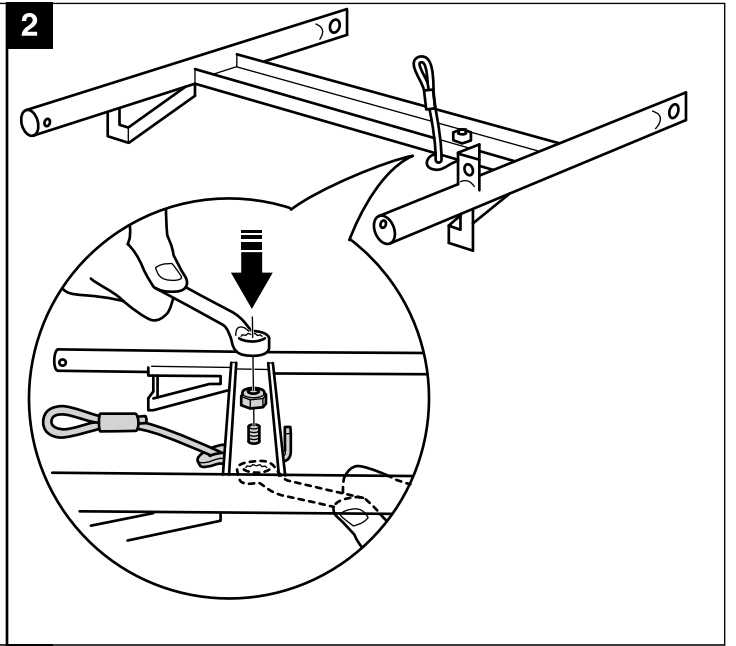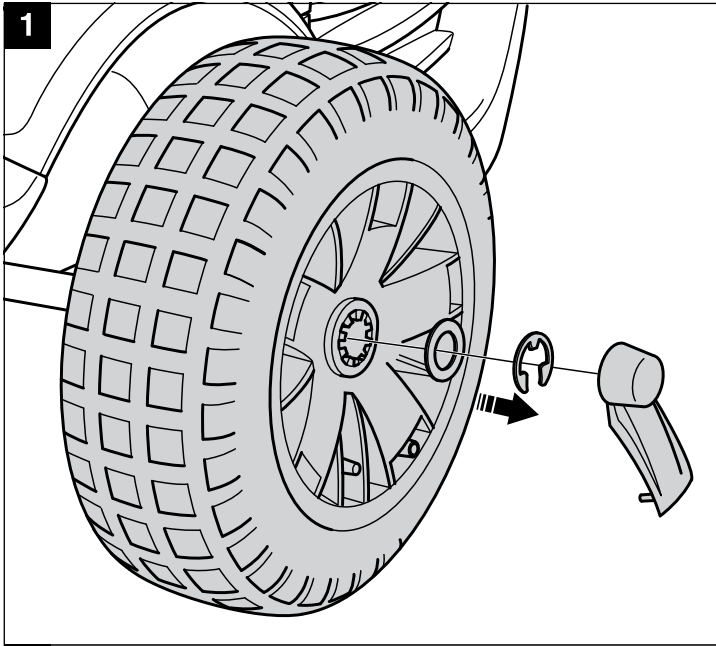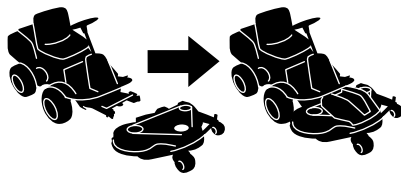


**2x**

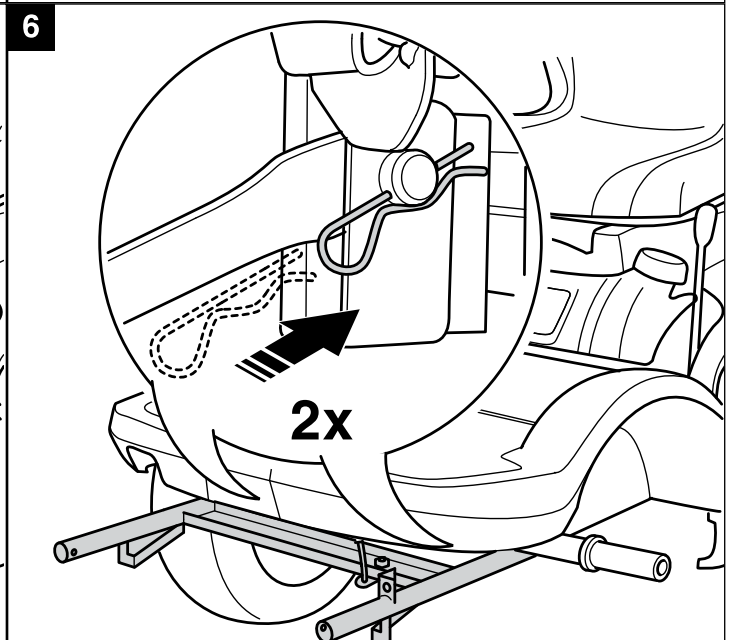


**2x**

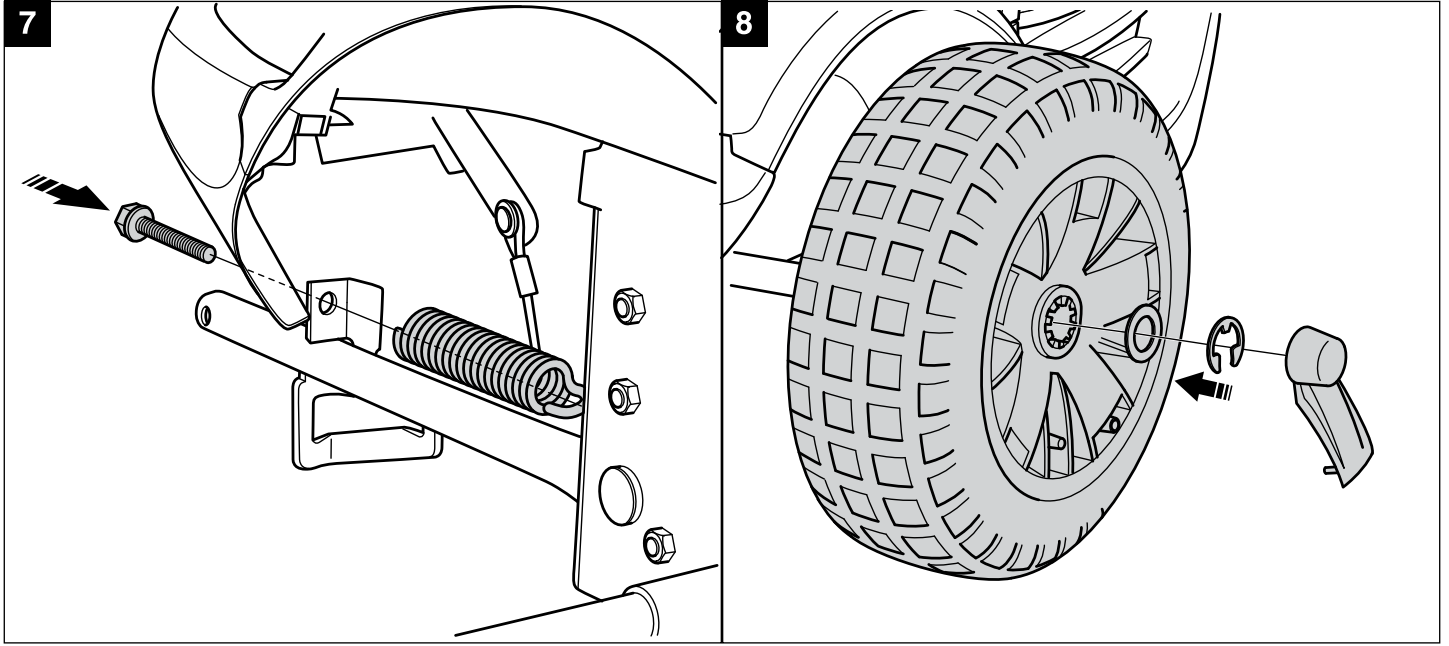


1

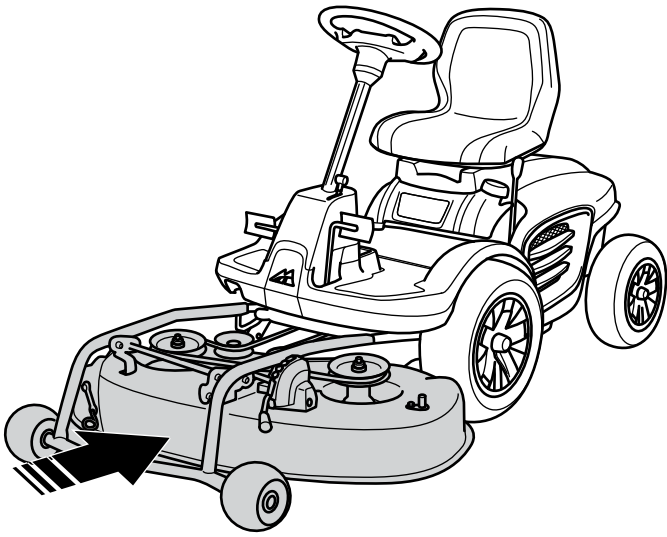


2

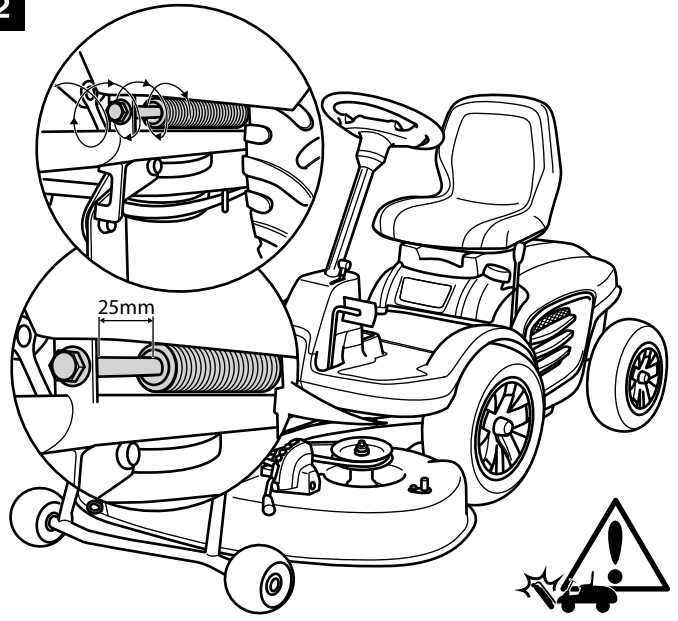

3

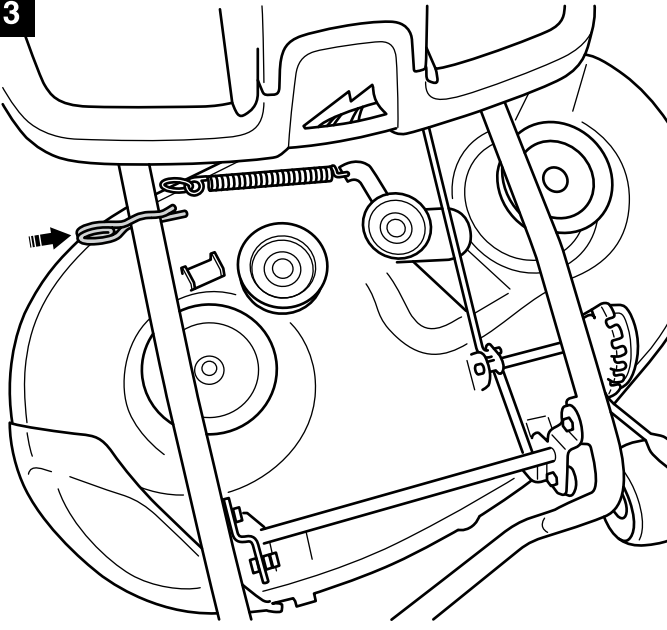

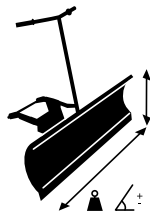

  
15 kg

