M50 #-083 "55"$).&/5

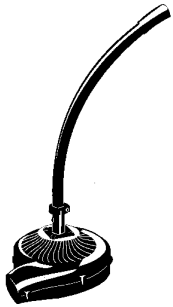

GB

INSTRUCTION MANUAL
IMPORTANT INFORMATION: Please read these instructions carefully and make sure you understand them before using this unit. Retain these instructions for future reference.

FR

MANUEL D'INSTRUCTIONS
RENSEIGNEMENTS IMPORTANTS: Avant d'utiliser cet appareil, veuillez lire atentivement les instructions et assurez-vous de les avoir comprises. Conservez les instructions pour référence ultérieure.

DE

BETRIEBSANWEISUNG
WICHTIGE INFORMATION: Lesen Sie diese Hinweise zur Handhabung des Geräts aufmerksam durch. Verwenden Sie es erst, wenn Sie sicher sind, daß Sie alle Anweisungen verstanden haben und gut aufbewahren.

ES

MANUAL DE INSTRUCCIONES
INFORMACIÓN IMPORTANTE: Lea atentamente las instrucciones y asegúrese de entenderlas antes de utilizar esta aparato. Conserve las instrucciones para la referencia en el futuro.

IT

LIBRETTO D'ISTRUZIONI
INFORMAZIONI IMPORTANTI: Siete pregati di leggere attentamente questo istruzioni e prendere dimestichezza con il prodotto prima di usario. Mantenga queste istruzioni per riferimento futuro.

NL

HANDLEIDING
BELANGRIJKE IMPORTANTS: Lees deze instructies zorgvuldig en wees er zeker van dat uze begrijpt alvorens de trimmer te gebruiken en bewaar ze voor toekomstige raadpleging.

115512826 Rev. B 2015-02-16 KAP

8 % / $

IDENTIFICATION (WHAT IS WHAT?)

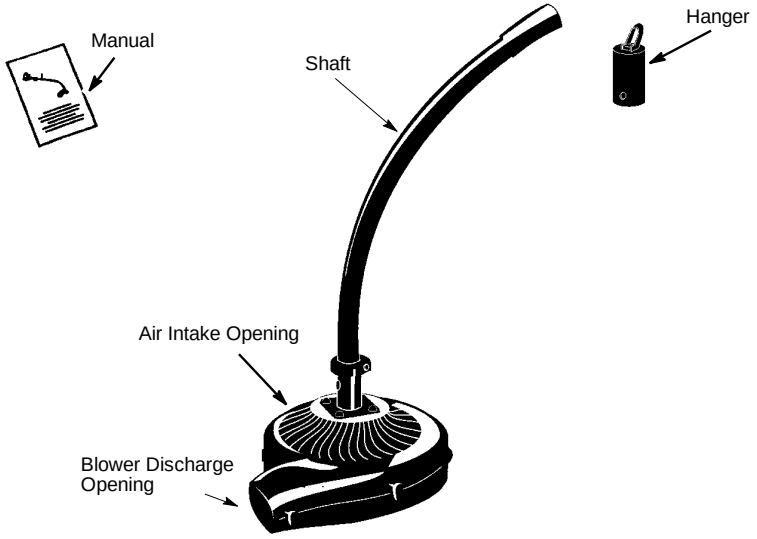

IDENTIFICATION OF SYMBOLS

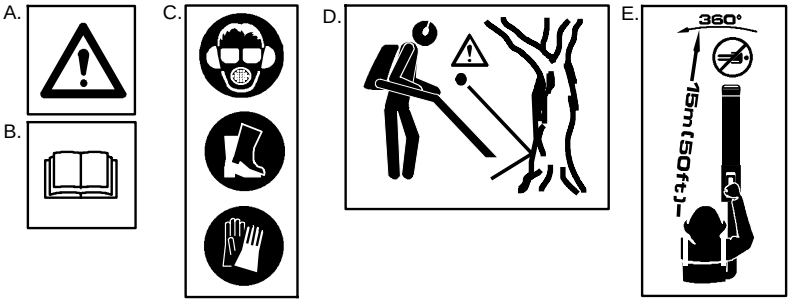

A. WARNING! This blower can be dangerous! Careless or improper use can cause serious or even fatal injury.
B. Please read the manual carefully and make sure you understand the instructions before using the machine.
C. Always wear:
Hearing protection, approved eye protection, face mask in dusty environments, anti-slip and stable boots and approved protective gloves.
D. The blower may throw objects at high velocity that can ricochet and hit the operator. This may cause serious eye damage.
E. The operator of the machine shall ensure, while working, that no persons or animals come closer than 15 meters.

SAFETY RULES

⚠ WARNING: When using gardening appliances, basic safety precautions must always be followed to reduce the risk of fire and serious injury. Read and follow all instructions. Failure to so so can result in serious injury. The operator is responsible for following the instructions and warnings for the attachment and unit powerhead, both in the instruction manual and on the units. Read entire instruction manual for both the attachment and the unit powerhead before using the unit! Be thoroughly familiar with the controls and the proper use of the unit. Restrict the use of this unit to persons who have read, understand and will follow the instructions and warnings on the unit and in the manuals. Never allow children to operate this unit.

OPERATOR SAFETY

⚠ WARNING: This attachment when coupled with a powerhead produces an electromagnetic field during operation. Under some circumstances, this field may interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this machine.

- S Wear protective gear. Always use steel-toed safety footwear with non-slip soles; snug-fitting clothing; heavy, long pants, and long sleeves; heavy-duty, non-slip gloves; eye protection such as non-fogging, vented goggles or face screen; an approved safety helmet; and sound barriers (ear plugs or mufflers) to protect your hearing. Regular users should have hearing checked regularly as engine noise can damage hearing. Secure hair above shoulder length. Secure or remove loose clothing and jewelry or clothing with loosely hanging ties, straps, tassels, etc.

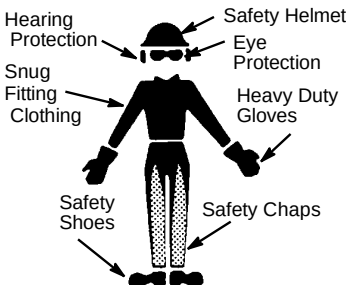

- S Stay alert. Do not operate when you are tired, ill, upset, or under the influence of alcohol, drugs, or medication. Watch what you are doing; use common sense.
- S Never start or run the engine inside a closed room or building. Breathing exhaust fumes can kill.
- S Keep handles free of oil and fuel.
- S Do not point blower discharge opening in the direction of people or pets.
- S Stop the engine before setting the unit down.

FUEL SAFETY

- S Mix and pour fuel outdoors.
- S Keep away from sparks or flames.
- S Use a container approved for fuel.
- S Do not smoke or allow smoking near fuel or the unit or while using the unit.
- S Avoid spilling fuel or oil. Wipe up all fuel spills before starting engine.
- S Move at least 3 meters away from fueling site before starting engine.
- S Stop engine and allow to cool before removing fuel cap.
- S Remove fuel cap slowly.

UNIT/MAINTENANCE SAFETY

- S Disconnect powerhead spark plug before performing maintenance.
- S Inspect entire unit before each use. Replace damaged parts. Check for fuel leaks. Make sure all fasteners are in place and securely fastened.
- S Maintain unit according to recommended procedures.
- S Have all maintenance and service not explained in this manual performed by an authorized service dealer.
- S Use only recommended parts and accessories.
- S Keep others away when making carburetor adjustments.
- S Never start the unit with the clutch housing removed. The clutch can fly off and cause serious injury.
- S Always see your authorized service dealer to replace a damaged impeller. Parts that are chipped, cracked, broken, or damaged in any other way can fly apart and cause serious injury. Have damaged parts replaced before using attachment.
- S Never douse or squirt the attachment with water or any other liquid. Clean unit and decals with a damp sponge.

BLOWER SAFETY

⚠ WARNING: Never put hands or other objects into blower housing to avoid serious injury from the rotating impeller.

⚠ WARNING: Inspect area before using the unit. Remove all debris and hard objects such as rocks, glass, wire, etc., that can ricochet, be thrown, or otherwise cause injury or damage during operation.

- S Keep others including children, animals, bystanders, and helpers at least 15 meters away. Stop the unit immediately if you are approached.
- S Hold the unit firmly with both hands.
- S Keep firm footing and balance. Do not overreach or stand on unstable surfaces.
- S Do not set unit on any surface except a clean, hard area while engine is running. Debris such as gravel, sand, dust, grass,

etc. could be picked up by the air intake and thrown out through discharge opening, damaging unit, property, or causing serious injury to bystanders or operator.

S Never place objects inside the discharge opening; always direct the blowing debris away from people, animals, glass, and solid objects such as trees, automobiles, walls, etc. The force of air can cause rocks, dirt, or sticks to be thrown or to ricochet which can hurt people or animals, break glass, or cause other damage.

S Check air intake opening frequently. Keep vents and discharge opening free of debris which can accumulate and restrict proper air flow.

S Never place any object in air intake opening as this could restrict proper air flow and cause damage to the unit.

S Never use for spreading chemicals, fertilizers, or other substances which may contain toxic materials.

S To avoid spreading fire, do not use near leaf or brush fires, fireplaces, barbecue pits, ashtrays, etc.

S Use only in daylight or good artificial light.

S Use only for jobs explained in this manual.

TRANSPORTING AND STORAGE

S Stop powerhead before leaving work area.

S Allow the powerhead and attachment to cool and secure the unit before storing or transporting in a vehicle.

S Store the attachment and fuel in area where fuel vapors cannot reach sparks or open flames from water heaters, electric motors or switches, furnaces, etc.

S Store the attachment in a high, cool, dry, well ventilated area out of the reach of children.

S Secure the machine during transport.

SPECIAL NOTICE: Exposure to vibrations through prolonged use of gasoline powered hand tools could cause blood vessel or nerve damage in the fingers, hands, and joints of people prone to circulation disorders or abnormal swelling. Prolonged use in cold weather has been linked to blood vessel damage in otherwise healthy people. If symptoms occur such as numbness, pain, loss of strength, change in skin color or texture, or loss of feeling in the fingers, hands, or joints, discontinue the use of this tool and seek medical attention. An anti-vibration system does not guarantee the avoidance of these problems. Users who operate power tools on a continual and regular basis must monitor closely their physical condition and the condition of this tool.

SAVE THESE INSTRUCTIONS

ASSEMBLY

CARTON CONTENTS

Check carton contents for the following:

S Blower attachment

S Attachment hanger

⚠ WARNING: If received assembled, repeat all steps to ensure your unit is properly assembled and all fasteners are secure. Examine parts for damage. Do not use damaged parts.

⚠ WARNING: Always disconnect powerhead spark plug before removing or installing attachments.

REMOVING ATTACHMENT

CAUTION: When removing or installing attachments, place the powerhead and attachment on a flat surface for stability.

1. Loosen the coupler by turning the knob counterclockwise.

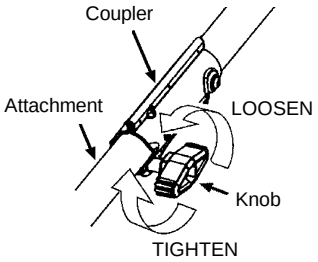

2. Press and hold the locking/release button.

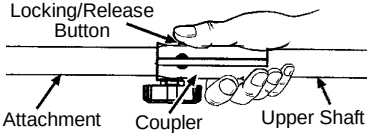

3. While securely holding the upper shaft, pull the attachment straight out of the coupler.

INSTALLING ATTACHMENT

CAUTION: When removing or installing attachments, place the powerhead and attachment on a flat surface for stability.

1. Remove the shaft cap from the attachment (if present) and discard.
2. Position locking/release button of attachment into guide recess of upper shaft coupler.

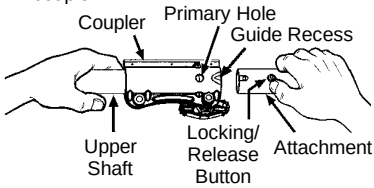

3. Push the attachment into the coupler until the locking/release button snaps into the primary hole.
4. Before using the unit, tighten the knob securely by turning clockwise.

WARNING: Make sure the locking/release button is locked in the primary hole and the knob is securely tightened before operating the unit. All attachments are designed to be used in the primary hole unless otherwise stated in the applicable attachment instruction manual. Using the wrong hole could lead to serious injury or damage to the unit.

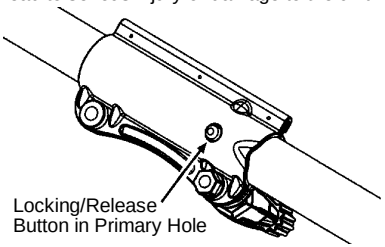

INSTALLING ATTACHMENT HANGER

An attachment hanger is provided for storage when attachment is not in use. To install hanger on attachment:

1. Remove the shaft cap from the attachment (if present) and discard.
2. Press and hold the locking/release button.
3. Push hanger onto the attachment until the locking/release button snaps into the hole.

OPERATION

OPERATING POSITION

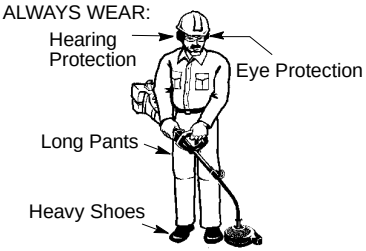

WARNING: Long or continuous exposure to high noise levels may cause permanent hearing impairment. Wear approved hearing protection when operating the blower.

OPERATING INSTRUCTIONS FOR BLOWER ATTACHMENT

Use the blower attachment for sweeping debris or grass clippings from driveways, sidewalks, patios, etc., for blowing grass clippings, straw, or leaves into piles, or removing debris from corners, around joints, or between bricks.

- S Control air flow by directing the blower discharge opening down or to one side.
- S Always work away from solid objects such as walks, large stones, vehicles, and fences.
- S Clean corners by starting in corners and moving outward. This will help prevent an accumulation of debris which could fly into your face.
- S Be careful when working near plants. The force of the air could damage tender plants.

MAINTENANCE

WARNING: Always stop unit and disconnect spark plug wire before performing maintenance.

CHECK FOR DAMAGED OR WORN PARTS

Contact an authorized service center for replacement of damaged or worn parts.

- S Impeller housing – discontinue use of blower if impeller housing is damaged.

CHECK FOR LOOSE FASTENERS AND PARTS

- S Housing Screws

INSPECT AND CLEAN UNIT AND LABELS

- S After each use, inspect complete unit for loose or damaged parts. Clean the unit and labels using a damp cloth with a mild detergent.
- S Wipe off unit with a clean dry cloth.

STORAGE

WARNING: Perform the following steps after each use:

- S Allow attachment to cool before storing or transporting.
- S Store the attachment in a high, cool, dry, well ventilated indoor area out of reach of children.

SEASONAL STORAGE

Prepare attachment for storage at end of season or if it will not be used for 30 days or more.

If your blower attachment is to be stored for a period of time:

- S Clean the entire unit.
- S Inspect attachment for any loose or damaged parts. Tighten any loose screws.
- S Replace any damaged, worn or broken parts.
- S Follow storage instructions in powerhead instruction manual for proper storage information and seasonal use.

EC DECLARATION OF CONFORMITY

Issuer's name: Husqvarna AB, SE-561 82 Huskvarna, Sweden (Tel: +46-36-146500)
Husqvarna AB claims sole responsibility for the blower attachment platform(s) UBLA representing model(s) Universal MTO003 from 2014 serial numbers and on-wards. The platform number and model number are clearly stated in plain text on the type plate along with the year with subsequent serial numbers.
The object of the declaration described above is in conformity with the requirements of the Council's Directives:
2006/42/EC "relating to machinery" 17 May 2006
2000/14/EC "relating to noise emissions in the environment" 08 May 2000
In accordance with Annex V, the declared sound values are:
The **measured sound power** is 109 dB and the guaranteed sound power is 114 dB
The following standards have been applied:
EN ISO 12100:2010, EN 15503:2009
TÜV Rheinland N.A. has carried out a voluntary examination on behalf of Husqvarna AB, providing AK72140363 - Certificate of Conformity and is approved for the following platforms/models:
LT28CSHV, LT28CSJN, LT28CSMC, LT28CSPR, 4S28CSPR, AT26CSMC, A05328CSHV
This certificate is applicable to all manufacturing locations and Countries of Origin, as stated on the product.
The supplied cultivator attachment conforms to the example that underwent examination.
Signed on behalf of: Husqvarna AB, Huskvarna, Sweden, 2013-12-01



Ronnie E. Goldman
Director of Engineering
(Authorized representative and responsible for technical documentation)
01-EN

DESCRIPTION DES PIÈCES

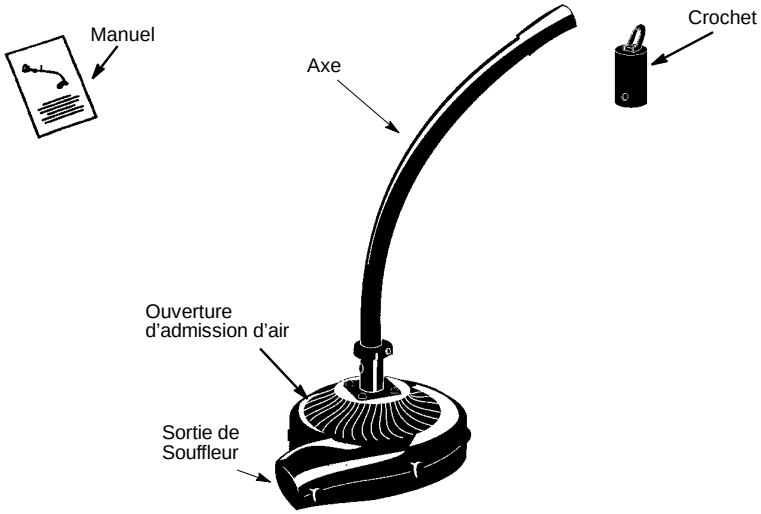

IDENTIFICATION DES SYMBOLES

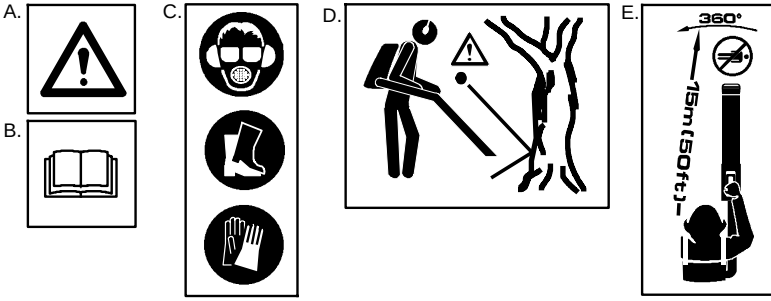

A. AVERTISSEMENT! Ce souffleur peut être dangereux ! Toute imprudence, négligence ou usage impropre peut être la cause d'accidents graves, voire mortels.
B. Avant d'utiliser ce souffleur, lire attentivement cette instructions et s'assurer d'en avoir bien compris le contenu.
C. Toujours utiliser:
Protecteur d'oreilles, des protège-yeux homologués, protection respiratoire en cas de risque de poussière, des bottes antidérapantes et stables, et des gants de protection homologués.
D. Le souffleur peut projeter violemment des objets pouvant ricocher. Cela peut provoquer des blessures graves aux yeux.
E. L'opérateur du souffleur doit veiller à ce qu'aucune personne ou animal ne se trouve à moins de 15 mètres. Lorsque plusieurs opérateurs partagent le même lieu de travail la distance de sécurité doit être de 15 mètres au minimum.

RÈGLES DE SÉCURITÉ

⚠ AVERTISSEMENT: Lorsque vous employez n'importe quel appareil de jardinage, il faudra toujours respecter des précautions fondamentales de sécurité afin de réduire le risque d'incendie et de blessures graves. Tout défaut de respecter tous les avertissements et règles de sécurité peut entraîner des blessures graves.

L'opérateur doit respecter les instructions et les avertissements relatifs à l'accessoire et au bloc-moteur reportés dans la notice et sur les appareils. Veuillez lire l'intégralité de la notice de l'accessoire et du moteur avant de les utiliser ! Il est indispensable de bien se familiariser avec l'appareil et ses commandes avant de l'utiliser. L'utilisation de cet appareil est réservée aux personnes qui ont lu, compris et mettent en pratique les consignes de sécurité et les instructions figurant dans ces notices. Ne jamais laisser un enfant manipuler cet appareil.

SÉCURITÉ DE L'UTILISATEUR

⚠ AVERTISSEMENT: Cette accessoire produit un champ électromagnétique quand il est associé à un moteur. Ce champ peut dans certaines circonstances perturber le fonction- nement d'implants médicaux actifs ou passifs. Pour réduire le risque de blessures graves ou mortelles, les personnes portant des implants médicaux doivent consulter leur médecin et le fabricant de leur implant avant d'utiliser cette machine.

S Portez de l'équipement de sécurité. Employez toujours des chaussures de sécurité avec des bouts en acier et des semelles non-glissantes; des habits ajustés; pantalons longs et épais et des manches longues; des gants à haute résistance non-glissants; de la protection aux yeux telle comme des lunettes protectrices aérées non embuantes ou masque protecteur; un casque de sécurité approuvé; et de la protection à l'audition (des boules ou des cache-oreilles). Les utilisateurs devront se faire examiner l'audition régulièrement, puisque le bruit des taille buisson peut nuit l'audition. Fixez les cheveux au-dessus des épaules. Attachez ou enlevez tous les bijoux, les vêtements amples ou les vêtements qui ont des attaches, des bretelles, des pompons, etc.. qui pendent.

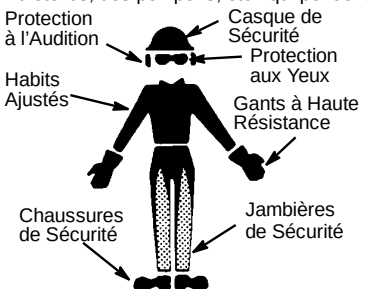

D Soyez vigilant(e). N'utilisez pas l'appareil quand vous êtes fatigué, malade ou sous influence de l'alcool, des drogues ou des médicaments. Portez attention à ce vous faites et faites preuve de bon sens.

S Ne mettez pas l'appareil en marche ni laissez pas tourner le moteur dans un endroit fermé. Respirer la vapeur d'essence peut vous tuer.

S Conservez les poignée libres d'huile et de carburant.

S Ne dirigez pas le sortie de souffleur dans la direction des personnes ou des animaux de compagnie.

S Toujours arrêter le moteur avant de poser l'appareil.

SÉCURITÉ DU CARBURANT

D Mêlez et versez le carburant dehors.

D Éloignez-vous des étincelles et des flammes.

D Employez un récipient approuvé pour l'essence.

D Ne fumez pas et ne permettez que personne fume près du carburant ni pendant l'utilisation de l'appareil.

D Évitez de renverser le carburant ou le huile. Essuyez tout les déversements de carburant avant de mettre le moteur en marche.

D Éloignez-vous au moins de 3 mètres de l'endroit de ravitaillage avant de mettre le moteur en marche.

D Arrêtez le moteur et laissez l'appareil se refroidir avant d'enlever le capuchon du réservoir de carburant.

D Enlevez le capuchon de remplissage lentement.

BON ENTRETIEN DE VOTRE APPAREIL

D Débranchez toujours la bougie (ou débranchez le source de courant) quand vous faites le maintien.

D Inspectez l'appareil et changez les pièces endommagées ou branlantes avant chaque utilisation de l'appareil. Réparez toute fuite de carburant avant d'utiliser l'appareil. Assurez-vous que toutes les raccords est en place et serrés fermement.

D Entretenez l'appareil selon les méthodes recommandées.

D Faites faire tout l'entretien, sauf celui recommandé dans ce manuel, par le distributeur autorisé de service.

D N'utilisez que les pièces de rechange recommandées.

D Quand vous faites des réglages du carburateur, écartez les autres personnes.

D Ne faites jamais démarrer le moteur quand la boîte de vitesses est enlevée. L'embrayage pourrait se détacher et causer des blessures graves.

D Addressez-vous toujours à un distributeur autorisé de service pour remplacer un rotor endommagé. Toute pièce ébréchee, fendue, cassée ou endommagée de toute autre manière peut être projetée et causer des blessures sèrieuses. Remplacez touts les pièces